

USER MANUAL



Solar Hybrid Inverter

HESP4840S100-H | HESP4846S100-H | HESP4850S100-H HESP4855S100-H | HESP4860S100-H



Contents

| 1. Safe | ty | 4 |
|-----------|--|--|
| 1.1、 | How to use this manual | 4 |
| 1.2、 | Symbols in this manual | 4 |
| 1.3、 | Safety instructions | 4 |
| 2. Prod | uction Instructions | 5 |
| 21 | Instructions | 5 |
| | Features | |
| • | System connection diagram | |
| | Production Overview | |
| | Dimension drawing | |
| | llation | |
| | | |
| | Select the mount location | |
| | Mount the inverter | |
| 4. Conn | nection | 11 |
| 4.1、 | Single-phase output | 11 |
| 4.2、 | Cable & circuit breaker requirement | 13 |
| 4.3、 | GRID & LOAD & GEN connection | 15 |
| 4.4、 | Battery Connection | 15 |
| 4.5、 | PV connection | 16 |
| 4.6、 | Grounding connection | 17 |
| 4.7、 | Final assembly | 17 |
| 4.8、 | Inverter Parallel | 18 |
| 4.8. | 1 Introduction | 18 |
| 4.8. | 2 Precautions for connecting the parallel connecting lines | 18 |
| 4.8. | 3 Schematic diagram of parallel connection in single phase | 20 |
| 4.8. | 4 Schematic diagram of parallel connection in three phase | 23 |
| 5. Oper | ation | 29 |
| 5 1 | Operation and display panel | 29 |
| | Setting | |
| | Time-slot charging/discharging function | |
| | Battery parameter | |
| | munication | |
| J. 401111 | | ······································ |
| 6.1、 | Dry contact | 49 |



| | 6.2、 | RS485/CAN communication port | 50 |
|----|-------|------------------------------|------|
| | | DIP switch | |
| | 6.4、 | WIFI port | 50 |
| | | USB-A port | |
| | 6.6、 | USB-B port | 51 |
| | 6.7、 | Parallel port | 51 |
| | 6.8、 | External CT port | 52 |
| 7. | Fault | and Remedy | . 53 |
| | | Fault code | |
| | 7.2、 | Troubleshooting | 56 |
| 8. | | ection and Maintenance | |
| | 8.1、 | Protection features | 58 |
| | 8.2、 | Maintenance | 60 |
| g | Data | sheet | 61 |



1. Safety

1.1. How to use this manual

- This manual contains important information, guidelines, operation and maintenance for the following products: HESP 4-6KW series
- The manual must be followed during installation and maintenance.

1.2. Symbols in this manual

| Symbol | Description |
|-----------------|---|
| A DANCER | DANGER indicates a hazardous situations which if not avoided will result in |
| <u> </u> | death or serious injury. |
| ↑ WARING | WARING indicates a hazardous situations which if not avoided could result |
| /!\ WARING | in death or serious injury. |
| A CAUTION | CAUTION indicates a hazardous situations which if not avoided could result |
| <u> </u> | in minor or moderate injury. |
| ① NOTICE | NOTICE provide some tips on operation of products. |

1.3. Safety instructions


- This chapter contains important safety instructions. Read and keep this manual for future reference.
- Be sure to comply the local requirements and regulation to install this inverter.
- Beware of high voltage. Please turn off the switch of each power sources before and during the installation to avoid electric shock.
- For optimum operation of this inverter, please follow required specification to select appropriate cable size and necessary protective device.
- Do not connect or disconnect any connections when the inverter is working.
- Do not open the terminal cover when the inverter working.
- Make sure the inverter is well grounding.
- Never cause AC output and DC input short circuited.
- Do not disassembly this unit, for all repair and maintenance, please take it to the professional service center.
- Never charge a frozen battery.
- Please keep children away from touching or mishandling the inverter.
- Please make sure that this inverter is the only input power source for the load, do not use it in parallel with other input AC power sources to avoid damage.



2. Production Instructions

2.1, Instructions

HESP series is a new type of solar energy storage inverter control inverter integrating solar energy storage & utility charging and energy storage, AC sine wave output. It adopts DSP control and features high response speed, reliability, and industrial standard through an advanced control algorithm.

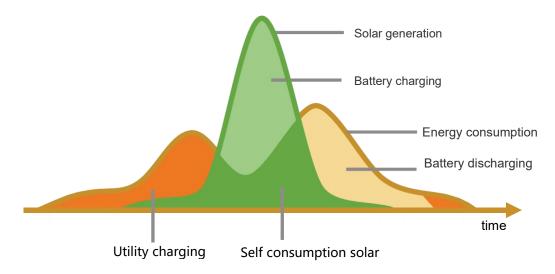

2.2. Features

- Supports lead acid battery and li-ion battery connections.
- With a dual activation function when the li-ion battery is dormant; either mains/photovoltaic power supply access can trigger the activation of the li-ion battery.
- Support single-phase pure sine wave output.
- Supports four different voltage levels of 200\208\220\230\240Vac per phase.
- Supports two solar inputs and simultaneous tracking of two solar maximum power charging/carrying capacity functions.
- Dual MPPT with 99.9% efficiency and maximum 16A current in a single circuit, perfectly adapted to high power modules.
- 2 charging modes are available: solar only, mixed mains/PV charging.
- With the time-slot charging and discharging setting function, you can set the time period for cutting in/out
 of mains charging and switch the time period between battery discharging and mains bypass power
 supply mode.
- · Energy saving mode function to reduce no-load energy losses.
- With two output modes of utility bypass and inverter output, with uninterrupted power supply function.
- LCD large screen dynamic flow diagram design, easy to understand the system data and operation status.
- 360° protection with complete short circuit protection, over current protection, over under voltage protection, overload protection, backfill protection, etc.
- Support CAN, USB, and RS485 communication.




2.3、System connection diagram

The diagram below shows the system application scenario of this product. A complete system consists of the following components:


- **PV modules:** converts light energy into DC energy, which can be used to charge the battery via an inverter or directly inverted into AC power to supply the load.
- **Utility grid or generator:** connected to the AC input, it can supply the load and charge the battery at the same time. The system can also operate generally without the mains or generator when the battery and the PV module power the load.
- **Battery:** The role of the battery is to ensure the regular power supply of the system load when the solar energy is insufficient and there is no mains power.
- **Home load:** Various household and office loads can be connected, including refrigerators, lamps, televisions, fans, air conditioners, and other AC loads.
- **Inverter:** The energy conversion device of the whole system.


The actual application scenario determines the specific system wiring method.

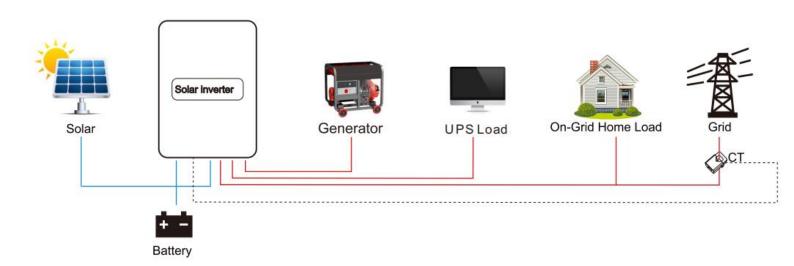



2.4. Production Overview

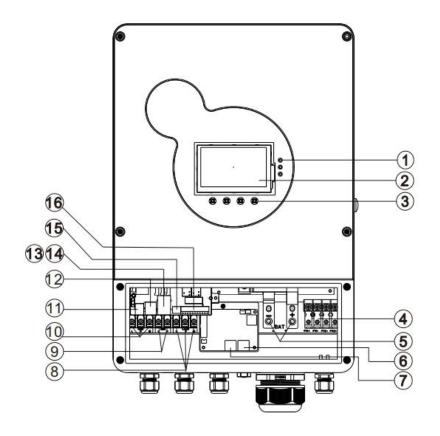


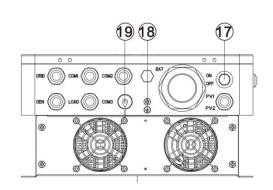

| 1 | LED Indicators | 11 | USB-B port |
|----|-------------------------------|----|------------------------|
| 2 | LCD screen | 12 | RS485/CAN port |
| 3 | keys | 13 | WIFI port1 (RJ45 port) |
| 4 | PV1/PV2 terminals | 14 | USB-A port |
| 5 | Battery terminal | 15 | DIP switch |
| 6 | Parallel communication A port | 16 | Dry contact |
| 7 | Parallel communication B port | 17 | ON/OFF switch |
| 8 | LOAD terminals | 18 | Grounding screw |
| 9 | Generator terminals | 19 | WIFI port 2 |
| 10 | Grid terminals | | |



2.5. Dimension drawing

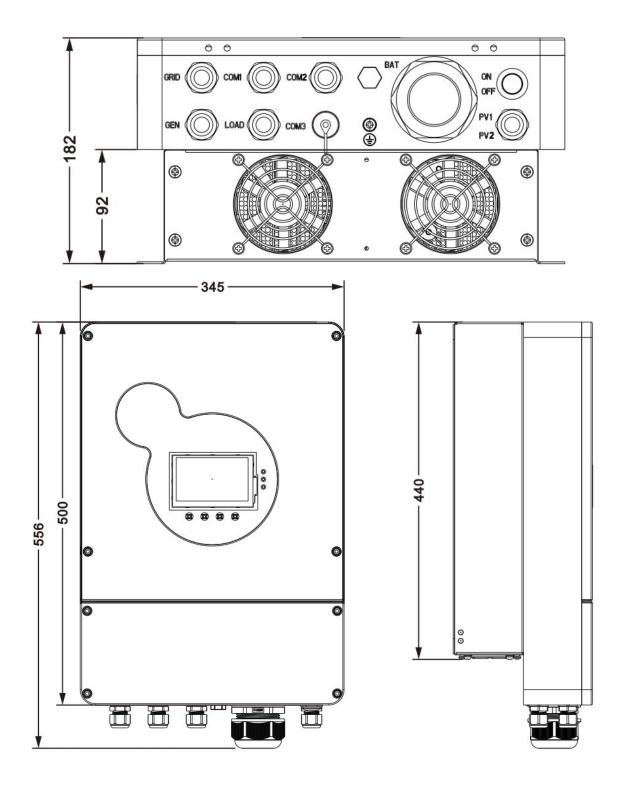




3. Installation

3.1. Select the mount location

HESP series can be used outdoors (protection class IP65). Please consider the followings before selecting the location:

- Choose the solid wall to install the inverter.
- Mount the inverter at eye level.
- Adequate heat dissipation space must be provided for the inverter.
- The ambient temperature should be between-25~60°C (-13~140°F) to ensure optimal operation.

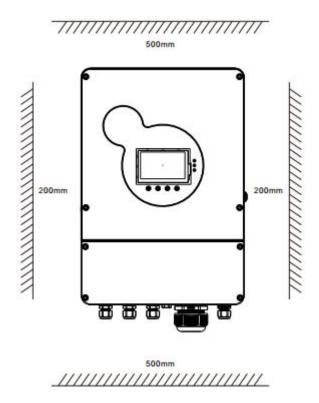

△ DANGER


- Do not install the inverter where highly flammable materials are near by.
- Do not install the inverter in potential explosive areas.
- Do not install the inverter with lead-acid batteries in a confined space.

- Do not install the inverter in direct sunlight.
- Do not install or use the inverter in a humid environment.




3.2. Mount the inverter

Punch 4 mounting holes in the wall with an electric drill according to the specified size, and insert 4 M8*60 expansion screws above.

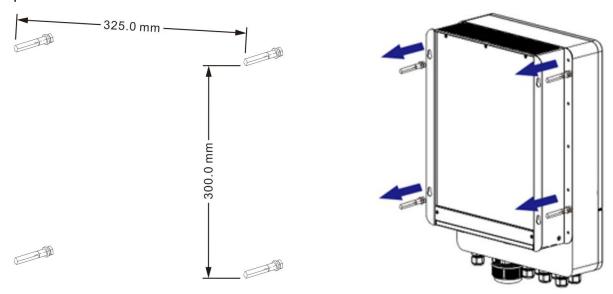

3.3、Remove the terminal cover & wiring


Using a screwdriver, remove the terminal protection cover and anti-insect net.

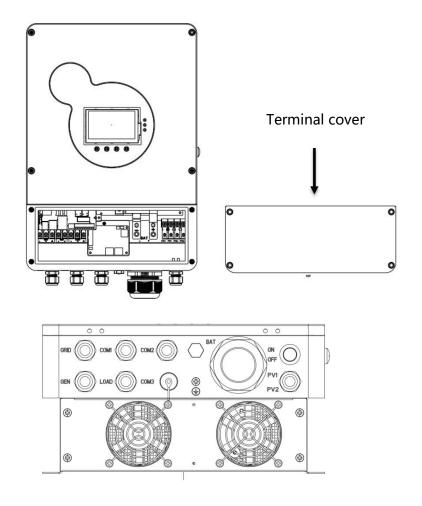



4. Connection

4.1. Single-phase output

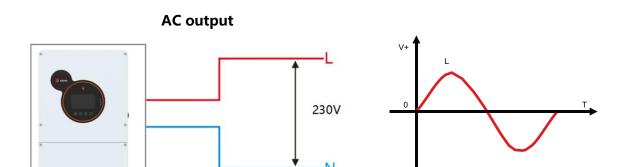

| Items | Description |
|----------------------------|------------------------------|
| Applicable Model | HESP series S model |
| Output Voltage Range (L-N) | 200 ~ 240Vac, 230Vac default |

① NOTICE

- Users can change the output phase mode and output voltage by setup menu. Please read the chapter 5.2 Setting.
- The output voltage can be set from 200V to 240V.



4.2. Cable & circuit breaker requirement

• PV INPUT

| Model | Cable Diameter | Max. PV Input Current | Circuit Breaker Spec |
|----------------|--|-----------------------|----------------------|
| HESP4840S100-H | 6mm²/10AWG | 16A/16A | 2P—25A |
| HESP4846S100-H | 6mm²/10AWG | 16A/16A | 2P—25A |
| HESP4850S100-H | 6mm²/10AWG | 16A/16A | 2P—25A |
| HESP4855S100-H | HESP4855S100-H 6mm ² /10AWG | | 2P—25A |
| HESP4860S100-H | 6mm²/10AWG | 16A/16A | 2P—25A |

• Grid

| Model | Cable diameter | Max.input current | Circuit Breaker Spec |
|----------------|----------------|-------------------|----------------------|
| HESP4840S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4846S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4850S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4855S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4860S100-H | 10mm²/7AWG | 40A | 2P—40A |

Generator

| Model | Cable diameter | Max.input current | Circuit Breaker Spec |
|----------------|----------------|-------------------|----------------------|
| HESP4840S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4846S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4850S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4855S100-H | 10mm²/7AWG | 40A | 2P—40A |
| HESP4860S100-H | 10mm²/7AWG | 40A | 2P—40A |



Battery

| Model | Cable Diameter | Max. Battery discharge Current | Max.battery charge current | Circuit Breaker Spec |
|----------------|----------------|--------------------------------|----------------------------|----------------------|
| HESP4840S100-H | 30mm²/2AWG | 100A | 100A | 2P-160A |
| HESP4846S100-H | 30mm²/2AWG | 118A | 100A | 2P-160A |
| HESP4850S100-H | 30mm²/2AWG | 125A | 100A | 2P-200A |
| HESP4855S100-H | 30mm²/2AWG | 130A | 100A | 2P-200A |
| HESP4860S100-H | 30mm²/2AWG | 135A | 100A | 2P-200A |

• LOAD

| Model | Cable diameter | Output current | Circuit Breaker Spec |
|----------------|-------------------------|----------------|----------------------|
| HESP4840S100-H | 10mm²/7AWG | 17.4A | 2P-40A |
| HESP4846S100-H | 10mm²/7AWG | 20A | 2P-40A |
| HESP4850S100-H | 10mm²/7AWG | 24A | 2P-40A |
| HESP4855S100-H | 10mm²/7AWG | 24A | 2P-40A |
| HESP4860S100-H | 10mm ² /7AWG | 26A | 2P-40A |

① NOTICE

PV INPUT、AC INPUT、AC OUTPUT

- 1. Use a stripper to remove the 6~8mm insulation of the cable.
- 2. Fixing a ferrule at the end of the cable. (ferrule needs to be prepared by the user)

G-8mm Cable Ferrule Cable Cable

Cable

Cable lugs

BATTERY


- 1. Use a stripper to remove the 6~8mm insulation of the cable
- 2. Fixing cable lugs that supply with the box at the end of the cable.

The wire diameter is for reference only. If the distance between the PV array and the inverter or between the inverter and the battery is long, using a thicker wire will reduce the voltage drop and improve the performance of the system.



4.3、GRID & LOAD & GEN connection

Connect the live, neutral and ground wires according to the cables' position and order shown in the diagram below.

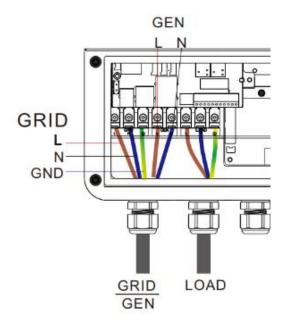


△ DANGER

- Before connecting AC inputs and outputs, the circuit breaker must be opened to avoid the risk of electric shock and must not be operated with electricity.
- Please check that the cable used is sufficient for the requirements, too thin, poor quality cables are a serious safety hazard.

4.4、Battery Connection

Connect the positive and negative cable of the battery according to the diagram below.

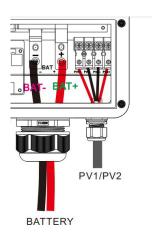




△ DANGER

- Before connecting battery, the circuit breaker must be opened to avoid the risk of electric shock and must not be operated with electricity.
- Make sure that the positive and negative terminals of the battery are connected correctly and not reversed, otherwise the inverter may be damaged.
- Please check that the cable used is sufficient for the requirements, too thin, poor quality cables are a serious safety hazard.

4.5、PV connection

Connect the positive and negative wires of the two strings of PV according to the diagram below.

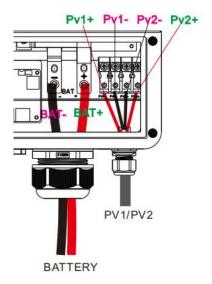


- Before connecting PV, the circuit breaker must be opened to avoid the risk of electric shock and must not be operated with electricity.
- Please make sure that the open circuit voltage of the PV modules in series does not
 exceed the Max. Open Circuit Voltage of the inverter (this value is 500V), otherwise the
 inverter may be damaged.



4.6. Grounding connection

Please make sure the grounding terminal connect to the Grounding Bar.

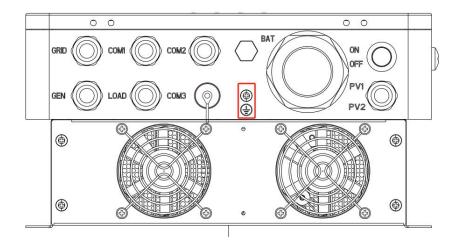

① NOTICE

• The grounding cable should have a diameter of not less than 4 mm² and be as close as possible to the grounding point.

4.7、Final assembly

After ensuring that the wiring is reliable and the wire sequence is correct, install the terminal protection cover in place.

- **Step 1**: Close the circuit breaker of the battery.
- **Step 2:** Press the rocker switch on the bottom of inverter, the screen and indicators light up to indicate that the inverter has been activated.
- Step 3: Sequential close of the circuit breakers for PV, AC input and AC output.
- Step 4: Start the loads one by one in order of power from small to large



4.8. Inverter Parallel


4.8.1 Introduction

- 1. Up to six units connected in parallel.
- 2. When using the parallel operation function, the following connecting lines (package accessories) shall be firmly and reliably connected:
- 3. Dip switches 1 and 2 of the first and last inverters must be put down when inverters are in parallel

Dip switchs



Parallel communication line*1:

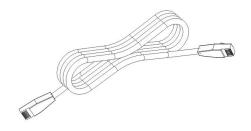

4.8.2 Precautions for connecting the parallel connecting lines

Warning: 🔼



1. PV connection:

When connected in parallel, the PV arrays of each machine must be independent and the PV arrays of PV1 and PV2 of each machine must also be independent.

2. Battery wiring:

Parallel connection in single or three-phase: ensure that all solar storage inverters are connected to the same battery, with BAT + connected to BAT + , BAT - connected to BAT -, and that the connection is correct with the same wiring length and line diameter before power on, so as to avoid the abnormal operation of parallel system output caused by wrong connection.

3. LOAD wiring:

Parallel connection in single phase: ensure L-to-L, N-to-N and PE-to-PE connection for all solar storage inverters, and that the connection is correct with the same wiring length and line diameter before power on, so as to avoid the abnormal operation of parallel system output caused by wrong connection. For specific



wiring, please refer to Wiring Diagram.

Parallel connection in three-phase: ensure N-to-N and PE-to-PE connection for all solar storage inverters. The L lines of all inverters connected to the same phase need to be connected together. But L lines of different phases cannot be joined together. Other connection precautions are the same as parallel connection in single phase. For specific wiring, please refer to Wiring Diagram.

4. GRID wiring:

Parallel connection in single phase: ensure L-to-L, N-to-N and PE-to-PE connection for all solar storage inverters, and that the connection is correct with the same wiring length and line diameter before power on, so as to avoid the abnormal operation of parallel system output caused by wrong connection. Meanwhile, it is not allowed to have multiple different AC source inputs to avoid damage to the external equipment of the inverter. The consistency and uniqueness of AC source input shall be ensured. For specific wiring, please refer to Wiring Diagram.

Parallel connection in three-phase: ensure N-to-N and PE-to-PE connection for all solar storage inverters. The L lines of all inverters connected to the same phase need to be connected together. But L lines of different phases cannot be joined together. Other connection precautions are the same as parallel connection in single phase. For specific wiring, please refer to Wiring Diagram.

5. Wiring of parallel communication line:

Our parallel communication cable is a shielded 8Pin network connection cable, which can be used for single-phase or three-phase parallel connection. Each machine must be connected with one out and one in. This means that the machine "Parallel_A" is connected to the machine to be parallelized "Parallel_B", and that the machine "Parallel_A" is not allowed to connect to the "Parallel_B". "Parallel_B" or "Parallel_A" is connected to the machine to be parallelized "Parallel_A". At the same time, the parallel communication cable of each machine should be fastened with 8Pin network connection cable to avoid disconnection or poor contact of the parallel communication cable, which may cause abnormal operation or damage to the system output.

- 6. Before and after connecting the system, please check the following system wiring diagrams in detail to ensure that all wiring is correct and reliable before powering on.
- 7. After the system is wired, powered on and in normal operation, if a new inverter needs to be connected, make sure to disconnect the battery input, PV input, AC input and AC output, and that all solar storage inverters are powered off before reconnecting into the system.




4.8.3 Schematic diagram of parallel connection in single phase

1. The parallel communication line of the solar storage inverter need to be locked with screws after connecting.

The parallel mode need to set as" single phase parallel" for each inverters




- 2. In case of parallel operation with multiple inverters, the schematic diagram of parallel connection is as follows:
 - a) Two units connected in parallel:

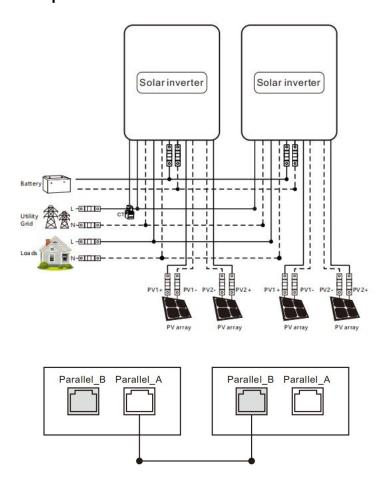




b) Three units connected in parallel:

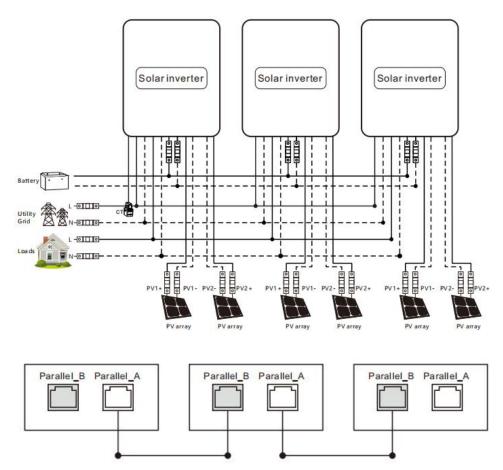


c) Four units connected in parallel:

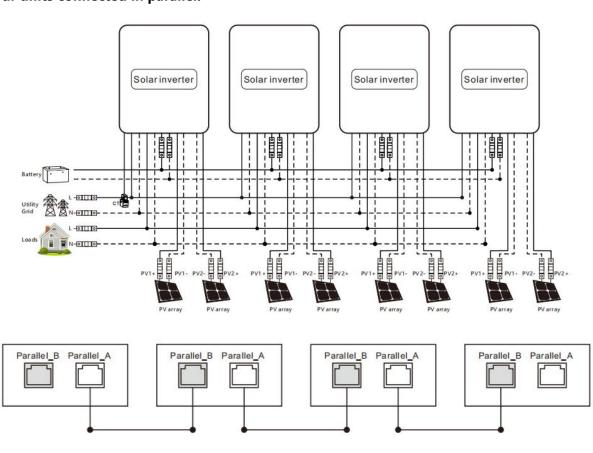




d) Five units connected in parallel:

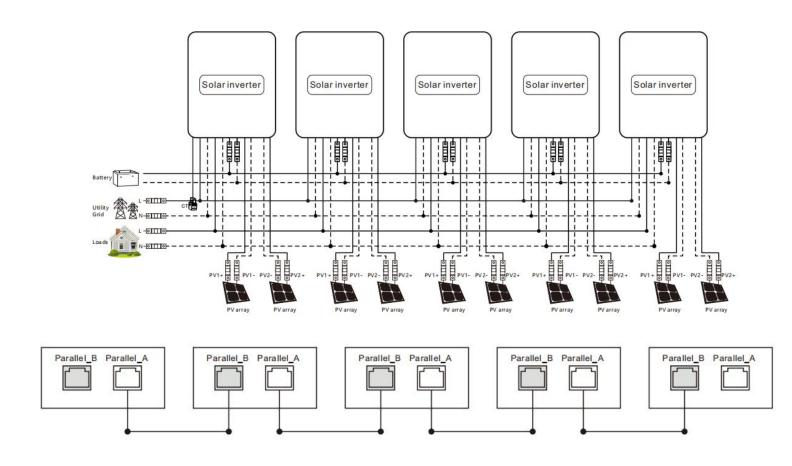

e) Six units connected in parallel:

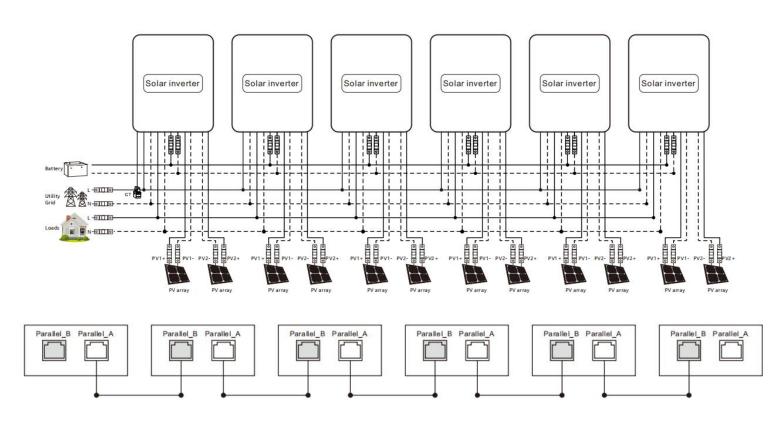



4.8.4 Schematic diagram of parallel connection in three phase

- 1. The parallel communication line and current sharing detection line of the solar storage inverter need to be locked with screws after connecting.
- 2. In case of parallel operation with multiple inverters, the schematic diagram of parallel connection is as follows:

Parallel Operation in three phase:


All inverters in P1 must be set as [three phase A]

All inverters in P2 must be set as [three phase B]

All inverters in P3 must be set as [three phase C]

When the output phase voltage is 230Vac

At present the line voltage between the live wire L1 in phase 1 and the live wire L2 in phase 2 is 230*1.732 = 398Vac, and similarly the line voltage

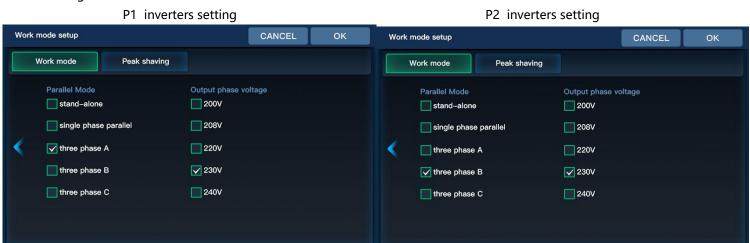


P3 inverters setting






a) Three units connected in three phase:

1+1+1 system:

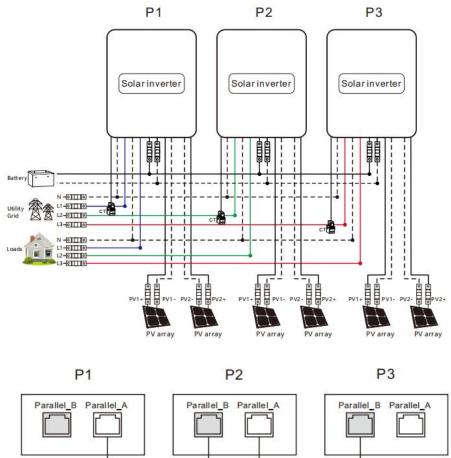

b) Four units connected in three phase:


2+1+1 system:

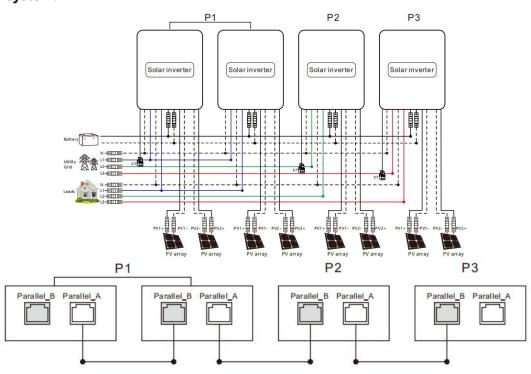


c) Five units connected in three phase:




3+1+1 system:

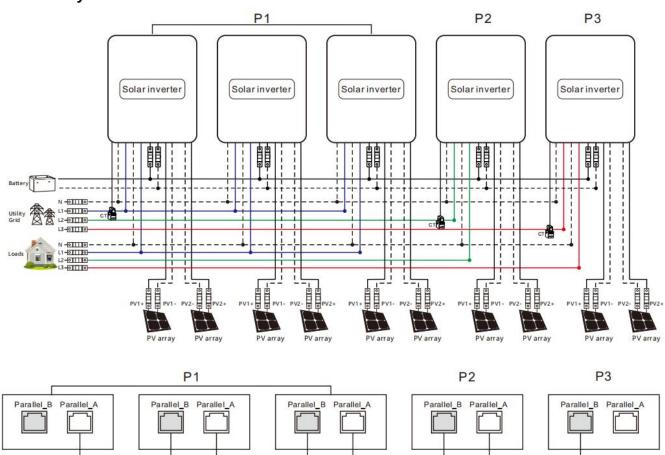

2+2+1 system:

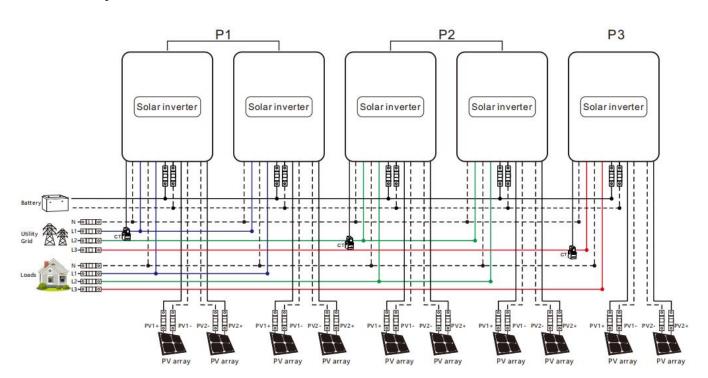





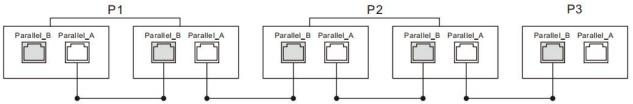


d) Six units connected in three phase:


2+2+2 system:

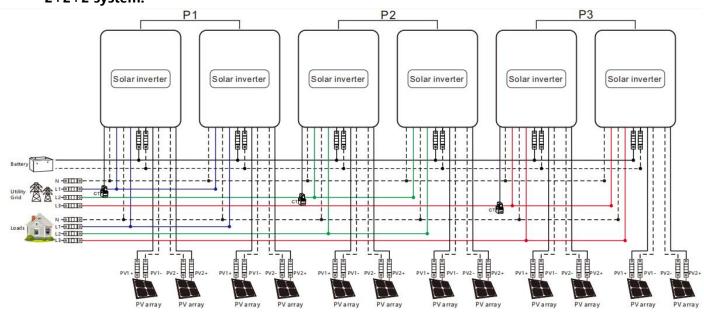

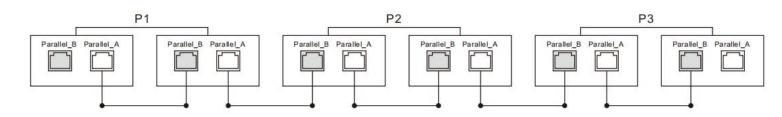


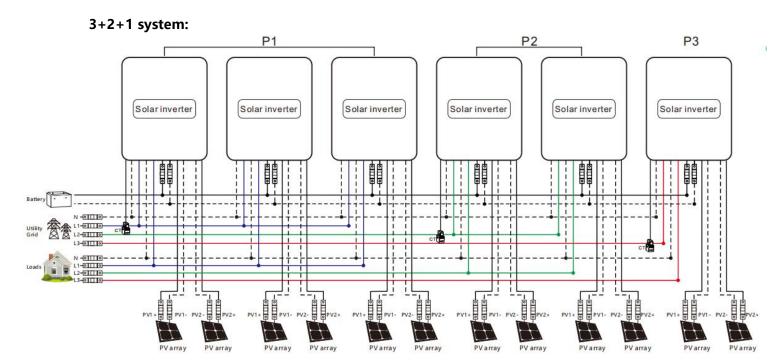



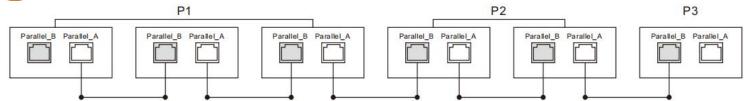

4+1+1 system:

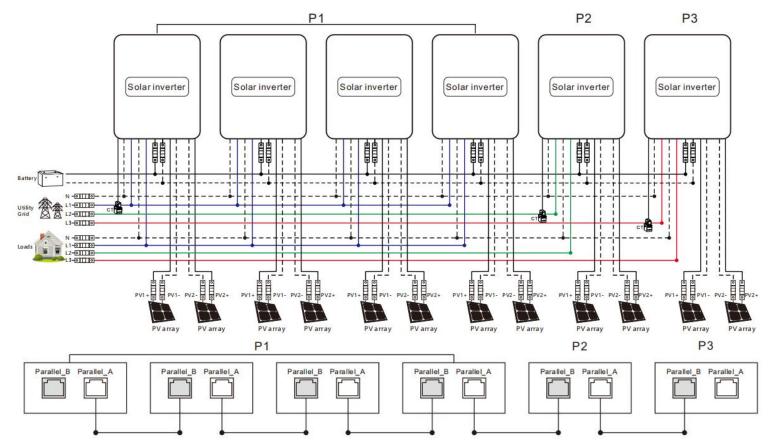

Note:

- 1) Before starting up and running, please check whether the connection was correct to avoid any abnormalities in the system.
- 2) All wiring must be fixed and reliable to avoid wire drop during use.
- 3) When the AC output is wired to the load, it shall be properly wired according to the requirements of the electrical load equipment to avoid damage to the load equipment.
- **4)** Setting item "output phase voltage setting" needs to be set consistently or only for the master. When paralleling, the voltage set by the master will prevail, and the master will be forced to rewrite the rest of the slaves to be consistent. This option can be set in standby mode only.
- 5) Machine factory default for single machine mode, if you use parallel or three-phase function, you need to set the" Parallel mode "item parameters through the screen. The setting method is: power on one machine at a time, the rest of the machine off, and then set the "Parallel mode" item parameters according to the site



system operation mode. After this machine is set successfully, turn off the machine switch and wait for the machine to be powered down, then set the rest of the machines in turn until all machines are set, and then all machines are powered up again at the same time and enter the working state.


6) After the system runs, the output voltage is measured correctly, and then the load setting is connected.



5. Operation

5.1. Operation and display panel

The operation and display panel below includes 1 LCD screen, 3 indicators, 4 touchable keys.

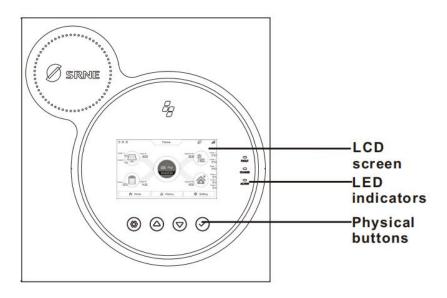

Keys

| Keys | Description | |
|------------|--|--|
| | To enter/exit the setting menu | |
| | To last selection | |
| | To next selection | |
| \bigcirc | To confirm/enter the selection in setting menu | |

• LED Indicators

| Indicators | Color | Description |
|---------------|------------------------|--|
| FAULT | Red Flash: error occur | |
| CHARGE | Vallour | Continued: charging complete |
| CHARGE Yellow | | Flash: charging |
| AC/INV | Green | Continued: utility grid by-pass output |
| | | Flash: inverter output |



Display panel



| Icon | Description | lcon | Description |
|---------|--|---------|------------------------|
| # | Solar panel | | Load |
| | Battery | 7 | Grid or Generator |
| A Home | Home page | ₩ ~ | Inverter is Working |
| History | History data | Setting | Setting |
| 0:0:0 | Local time | CZV) | The buzzer is slient |
| 0 | Indicates that the machine is currently in energy-saving mode. | ,,,,,, | The enery direction |



View real-time data

• On the LCD home screen, click the inverter icon, battery icon, mains icon, load icon and photovoltaic icon to view the real-time data of the machine.

| | System data | | | | |
|---------|--|-----------|-------------------------|--|--|
| No. | ltem | No. | ltem | | |
| 1 | Machine state | 9 | SN code | | |
| 2 | MCU1 version | 10 | Min version number | | |
| 3 | LCD version | 11 | Rated power | | |
| 4 | MCU2 version | 12 | RS485 Address | | |
| 5 | Outside Temperature | 13 | Transformer temperature | | |
| 6 | inverter Voltage | 14 | inverter Current | | |
| 7 | Customer ID | 15 | Positive busbar voltage | | |
| 8 | Negative busbar voltage | 16 | Total busbar voltage | | |
| | Batt | tery data | | | |
| 1 | SOH | 6 | Discharge current | | |
| 2 | SOC (Percentage of remaining battery capacity) | 7 | BMS protocol | | |
| 3 | Battery voltage | 8 | Battery type | | |
| 4 | Charge current | 9 | Battery Charge Status | | |
| 5 | Battery power (Battery charging and discharging power) | | | | |
| | Gr | id data | | | |
| 1 | Voltage | 5 | Current | | |
| 2 | active power | 6 | apparent power | | |
| 3 | Frequency | 7 | Mains charging current | | |
| 4 | CT power | 8 | | | |
| | Load data | | | | |
| 1 | Voltage | 5 | Current | | |
| 2 | UPS load active power | 6 | UPS load apparent power | | |
| 3 | Frequency | 7 | load rate | | |
| PV data | | | | | |
| 1 | PV1 voltage | 5 | PV2 current | | |
| 2 | PV1 current | 6 | PV2 power | | |
| 3 | PV1 power | 7 | PV total power | | |
| 4 | PV2 voltage | | | | |



• Click on the history button in the menu bar below to access the historical data and view various types of historical data.

| Tody data | | | |
|-------------------|--|------------|--|
| 1 | Battery charging energy | 4 | Load consumption energy |
| 2 | Battery discharging energy | 5 | Grid charging energy |
| 3 | Solar generated energy | 6 | Load consumption energy from grid |
| | Hist | toriy | |
| 1 | PV generation last seven days history | 4 | Mains charge eneryfor last 7 days |
| 2 | Battery charging enery for last 7 days | 5 | Load consumption eneryfor last 7 days |
| 3 | Battery discharge for last 7 days | 6 | Load consumption from the grid for last 7 days |
| | Enery S | itatistics | |
| 1 | Total Battery Charging Energy | 4 | Total Battery Disharging Energy |
| 2 | Total solar generated energy | 5 | Total load consumption energy |
| 3 | Total grid charging energy | 6 | Total load consumption energy from grid |
| Historical faults | | | |




5.2、Setting

Operating instructions: Click on the settings in the menu bar at the bottom of the screen to enter the setup interface, including the basic settings, work mode setup, battery setup, on grid setup, advanced setup of the five major setup items

5.2.1 Basic Setup


5.2.1.1 Display Setup

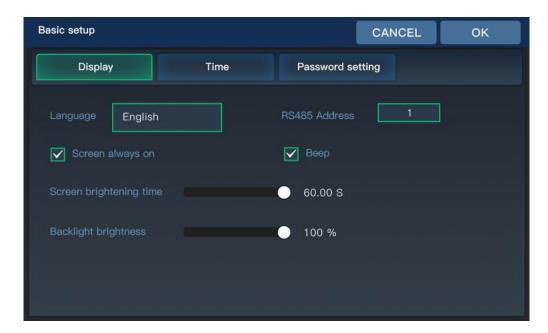


| Parameter Meaning | Description | | |
|-------------------------|---|--|--|
| Language | Currently only English | | |
| RS485 Address | Display and current inverter RS485 address, range 1-254 | | |
| Screen always on | Selectable whether the screen is always on or not | | |
| Веер | You can choice whether enable the Beep alarm | | |
| Screen brightening time | Setting range 0-60S | | |
| Backlight brightness | 0-100% | | |



5.2.1.2.Time Setup

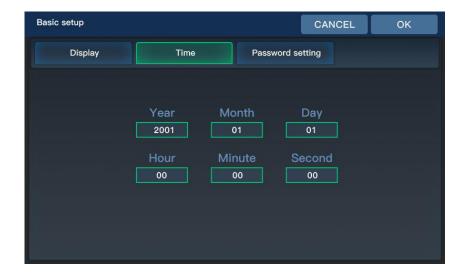

5.2.1.3. Password Setting (Password is required to access the Grid Settings and Advanced Settings)

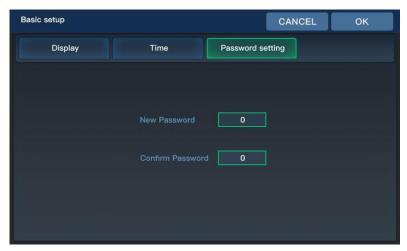


Default password is "00000".

Password setting value range: 0-65535



5.2.2 Work Mode Setup

5.2.2.1.Work Mode

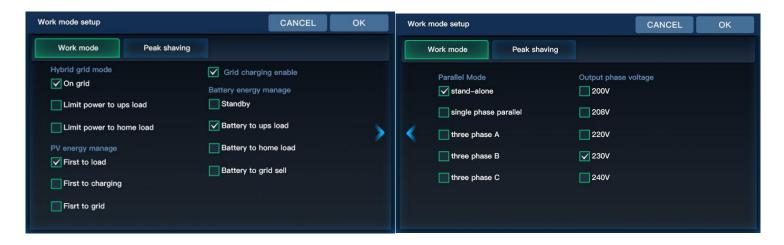

Home Load: connected to the GRID port of the machine, requires external CT for monitoring. Ups Load: connected to the LOAD port of the machine.

| Parameter Meaning | Option | Description | | |
|-----------------------|---|--|--|--|
| | On grid | Direct grid connection of excess PV energy | | |
| Hybrid grid mode | Limit Power to ups load | Ups load backflow prevention, photovoltaic or battery energy is only for the ups load, excess energy will not be connected t the grid | | |
| | Limit Power to home load | Home load anti-backflow, solar or battery energy is only supplied to the home load, excess energy will not be connected to the grid. | | |
| | connected, the followin When mixed grid mode | e is set to "Limit Power to ups load" or when CT is not ng load refers to the ups load. e is set to "Limit Power to home load/On grid" and CT is ng load refers to the ups load plus the home load. | | |
| PV energy manage | First to Load | PV power supply logic: load-charge-grid connection | | |
| | First to charging | PV power supply logic: charge-load-grid connection | | |
| | First to grid | PV power supply logic: load-grid connection-charge | | |
| Grid charging enable | Selectable grid participation in battery charging | | | |
| | Standby | The battery does not discharge, and the battery is discharged only when the working state is off the grid. | | |
| Battery energy manage | Battery to ups load | When the PV power is less than the UPS load power, the battery discharge is added. | | |
| | Battery to home load | The battery can supply the power to Home load | | |
| | Battery to grid sell | The battery can supply the power to grid. | | |
| | Stand-alone | Stand-alone | | |
| Parallel mode | Single phase Parallel | se Parallel | | |
| | Three Phase A | Three-phase parallel connection setting | | |



| | Three Phase B | All machines in phase 1 must be set as [three phase A] |
|----------------------|------------------------------------|---|
| | | All machines in phase 2 must be set as [three phase B] |
| | Three Phase C | All machines in phase 3 must be set as [three phase C] |
| | | When the output voltage is 230Vac |
| | | At present the line voltage between the live wire L1 in phase 1 |
| | | and the live wire L2 in phase 2 is 230*1.732 = 398Vac, and |
| | | similarly the line voltage |
| Output phase voltage | Settable: 200V,208V,220V,230V,240V | |

5.2.2.Peak Shaving




| Parameter Meaning | Description |
|--------------------------------------|--|
| Time charging/ discharging enable | Select whether to turn on timed charging and discharging |
| Start/End Time | Setting the time period for timed charging and discharging |
| Stop SOC | Setting the battery charging cut-off SOC value and the cut-off SOC value for discharging during the timed charging and discharging time period (during BMS communication) |
| Stop Volt | Setting the battery charging cut-off voltage value and discharging cut-off voltage value during the timed charging and discharging time period (when the BMS is not communicating) |
| Max Power | Setting the battery charging power and discharging power during the timed charging and discharging time period |
| Grid charge | When setting the timed charge, select the grid to charge the battery |
| Generator | When setting the timed charge, select the generator to charge the battery |



5.2.3 Battery setup

5.2.3.1.Battery Type

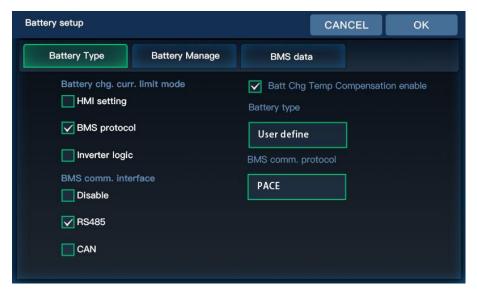

| Parameter Meaning | Option | Description | | |
|-------------------------------|---|--|--|--|
| Battery chg. curr. limit | 1.18.41 | Maximum battery charging current is limited according to the | | |
| | HMI | inverter battery charging current setting value. | | |
| | DMC | Maximum ba | Maximum battery charging current is limited by the current limit | |
| (Valid for BMS communication) | BMS | value of the I | BMS. | |
| Communication) | Invertor | Maximum battery charging current is limited by the machine's | | |
| | Inverter derating lo | | c. | |
| | Disable | BMS does not communicate | | |
| BMS comm. interface | RS485 | BMS RS485 communication function | | |
| | CAN | BMS CAN co | mmunication function | |
| Battery Temperature | Calast whathauts to me | | | |
| Compensation | Select whether to turn on temperature compensation | | | |
| | USER | | User customizable to set all battery parameters | |
| | SLd | | Sealed Lead Acid Battery | |
| | FLd | | Open-ended lead-acid batteries | |
| | GEL | | gel lead-acid battery | |
| Battery Type | LFP/14/ 15/ | | Li-FePO4/14/15/16, corresponding to Li-FePO4 14 | |
| | LFP 16 | | string, 15 string, 16 string | |
| | N13/ N14 | | Ternary lithium batteries, N13/N14, corresponding | |
| | | | to ternary lithium batteries 13 string, 14 string | |
| | No battery | | Without battery | |
| | When the BMS port selection setting item = 485 or CAN, you need to select the | | | |
| | corresponding lithium battery manufacturer brand for communication: | | | |
| | 485 protocol:1 : PACE-PACEEX 2 : RUDA-Ritar 3 : AOGUAN-=ALLGRAND BATTERY 4 : | | | |
| BMS comm.protocol | OULITE-OLITER 5 : CEF-CHANGFENG TECNOLOGY 6 : XINWANGDA -SUNWODA 7: | | | |
| | DAQIN -DAKING 8: WOW-SRNE 9: PYL-PYLONTECH 10: MIT-FOXESS 11: XIX-XYE 12: | | | |
| | POL-POWERMR 13: GUOX-Gotion 14: SMK-SMK 15: VOL-WEILAN | | | |
| | CAN protocol:16:UZE-YUZE | | | |



5.2.3.2.Battery Manage




| Parameter Meaning | Description |
|------------------------------|---|
| Maximum chg.voltage | When the battery is charging, the voltage reaches the value to stop charging |
| Batt. Recharging voltage | When the battery is fully charged, the inverter stops charging and resumes charging when the battery voltage falls below this voltage value. |
| Battery curr. stop chg. | when the charging current falls below this setting, the battery will stop charge. |
| Maximum chg. current | Setting the amount of current when charging the battery |
| Max. chg. curr. by Grid | When using mains charging, set the size of the battery mains charging current (the value is the battery current) |
| Bat.SOC stop chg. | "Charging will stop when the SOC value reaches this set point (effective when BMS communication is normal)." |
| Batt volt.stop dchg | When the battery is discharged, the voltage reaches the value and stops discharging. |
| Batt volt.restart dischg | When the battery voltage is too low to discharge, the battery voltage needs to reach this setting to discharge again. |
| Battery under volt. alarm | Battery under-voltage alarm point, when the battery voltage is lower than the judgment point, the under-voltage alarm will be reported and the output will not be turned off. |
| Batt volt low fault recovery | When the battery report voltage low fault, the battery voltage reach this setting, the fault |



| | will be cleard. | | | |
|--|--|--|--|--|
| Batt voltage low fault | When the battery voltage reach this setting, the inverter will report battery voltage low fault. | | | |
| Battery max.curr.dcharge | Set the max battery discharger current | | | |
| Batt.soc.stop.dchg | When the SOC value reaches this setting, the battery will stop discharge(valid when BMS communication is normal). | | | |
| Batt.soc restart dischg | When the battery report SOC low fault, the battery SOC reach this setting, the fault will be cleard(valid when BMS communication is normal). | | | |
| Batt under capacity alarm | SOC value up to this setting will report 30 faults. The inverter output will not shut down and the fault disappears if the SOC value exceeds 5% of the set value. (Valid when BMS communication is normal) | | | |
| Batt.soc low fault When the battery voltage reach this setting, the inverter will report battery SOC fault(valid when BMS communication is normal). | | | | |
| Batt. Volt. low fault delay When the battery voltage reaches the "Batt voltage low fault" setting, the battery diacharging with a delay. | | | | |

5.2.3.3.BMS date(When the battery communicate with inverter)



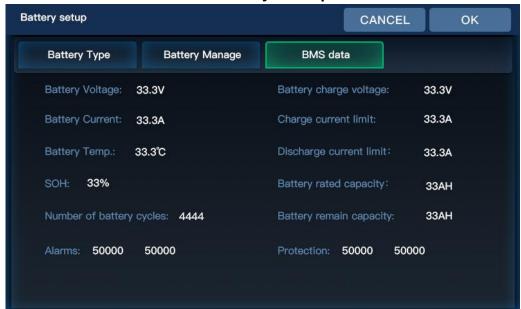




5.2.4 On grid setup

To enter this setting, you need to enter the password set by the user, the default password is "00000".


5.2.4.1.Basic

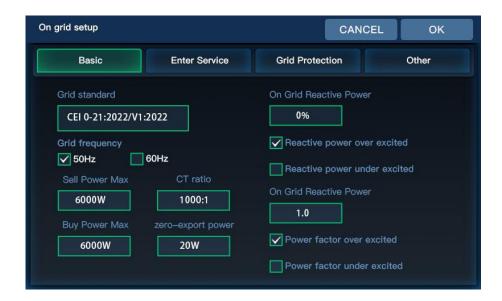

| Parameter Meaning | Description | | | | |
|-----------------------------------|--|--|--|--|--|
| | Italy:CEI 021 | | | | |
| | Germany:VDE-ARN-4105 | | | | |
| | Europel:EN50549-1 | | | | |
| | Spain:UNE217002 | | | | |
| | England:G99 | | | | |
| Grid Standard | South Africa: NRS-097 | | | | |
| | Other regions:GNL | | | | |
| | Australia:AS4777.2 Australia A | | | | |
| | Australia:AS4777.2 Australia Newzealand | | | | |
| | Poland:EN 50549-1 | | | | |
| | MYANMAR | | | | |
| Grid Frequency | Selection of local grid frequency, 50Hz/60Hz | | | | |
| CT ratio | When connecting an external CT, enter the ratio on the CT specification. | | | | |
| Sell power Max | On grid power | | | | |
| Buy power Max | Maximum power drawn from the grid. If the grid charging power + load power exceeds this setting, the machine reduces the charging power. (Setting range: 0 to rated power) | | | | |
| Zero-export power | Error calibration power in the case of backflow prevention, recommended setting 20-100W | | | | |
| On-Grid Reactive Power | Setting range 0-100%, % of reactive power | | | | |
| Reactive power over/under excited | Over indicates 0%-100% / Under indicates -100%-0% | | | | |
| On Grid PF | Setting range 0.8-1 | | | | |
| Power factor over/under excited | Over indicates 0.8-1 / Under indicates -0.8 ~- 1 | | | | |




5.2.4.2. Enter Service(This setting is not recommended to be changed by the customer, the value depend on the grid standard)

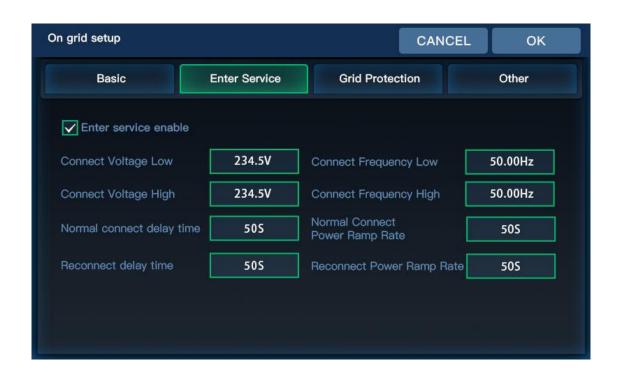

| Parameter Meaning | Description |
|--------------------------------|---|
| Enter Service enable | Grid-connect enable setting (on by default) |
| Connect Voltage Low | Grid-connected low voltage protection voltage |
| Connect Frequency Low | Grid-connected low-frequency protection points |
| Connect Voltage High | Grid-connected high-voltage protection voltage |
| Connect Frequency High | Grid-connected high-frequency protection points |
| Normal connect delay time | Grid normal connection, grid connection delay time |
| Normal connect Power Ramp Rate | Normal grid connection, rate of rise of grid-connected power |
| Reconnect delay time | Grid down reconnection, grid connection delay time |
| Reconnect Power Ramp Rate | Grid disconnection and reconnection, rate of rise of grid-connected power |




5.2.4.3. Grid Protection (This setting is not recommended to be changed by the customer, the value depend on the grid standard)

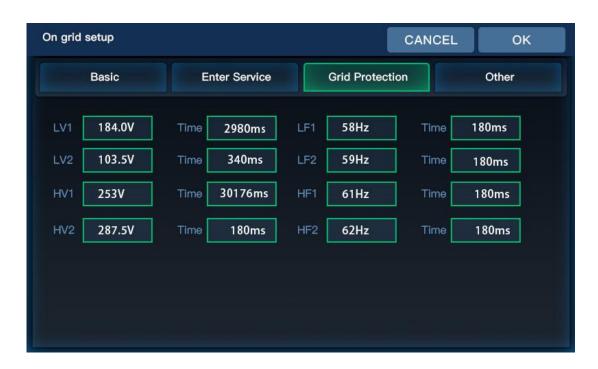

| Parameter Meaning | Description | | |
|-------------------|---|--|--|
| LV1 | Class 1 undervoltage protection point | | |
| LF1 | Class 1 underfrequency protection point | | |
| LV2 | Class 2 undervoltage protection point | | |
| LF2 | Class 2 underfrequency protection point | | |
| HV1 | Class 1 overvoltage protection point | | |
| HF1 | Class 1 overfrequency protection point | | |
| HV2 | Class 2 overvoltage protection point | | |
| HF2 | Class 2 overfrequency protection point | | |
| Time | Protection Response Time | | |



5.2.4.4. Other

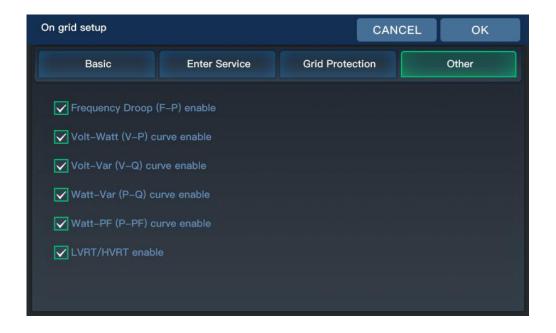


| Parameter Meaning | Description |
|-------------------|--|
| Frequency Droop | A direct mount of inventor output nouser properties to said frequency |
| (F-P) enable | Adjustment of inverter output power according to grid frequency |
| Volt -Watt (V-P) | Adjustment of the inverter active newer according to the cot grid voltage |
| curve enable | Adjustment of the inverter active power according to the set grid voltage |
| Volt-Var (V-Q) | A direct mount of the inventor repetite pover properties to the set and voltage |
| curve enable | Adjustment of the inverter reactive power according to the set grid voltage |
| Watt-Var (P-Q) | Adjustment of the inverter reactive never asserding to the set active never |
| curve enable | Adjustment of the inverter reactive power according to the set active power |
| Watt-PF (P-PF) | Adjustment of the power factor of the inverter according to the set active power |
| curve enable | Adjustifient of the power factor of the inverter according to the set active power |
| LVRT/HVRT enable | Adjustment of grid HV ride-through / LV ride-through values |



5.2.5 Advance Setup


To enter this setting, you need to enter the password set by the user, the default password is "00000".

5.2.5.1. Generator

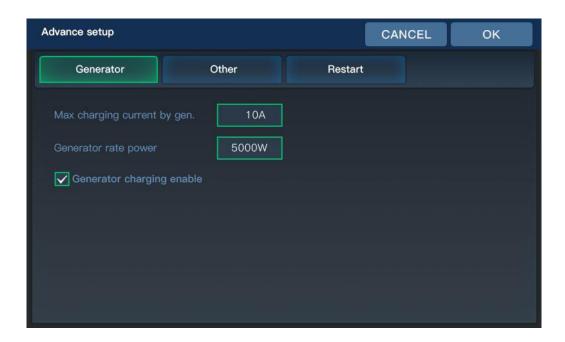

| Parameter Meaning | Description |
|------------------------------|--|
| Max charging current by gen. | Maximum battery charging current during generator charging |
| Generator rate power | Setting the power of the generator up to the rated power of the inverter |
| Generator charging enable | Setting whether the generator is charged or not |


5.2.5.2. Other

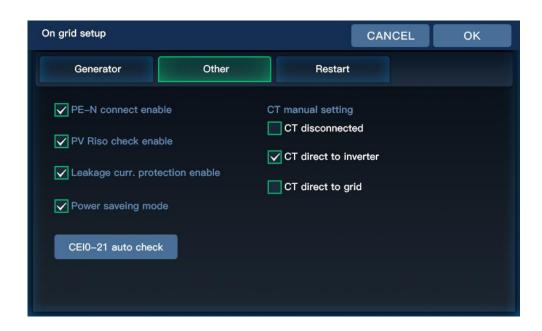



| Parameter Meaning | Description |
|---------------------------------|---|
| PE-N connect enable | Enable automatic switching of PE-N connections |
| PV Riso check enable | Enable PV insulation impedance detection |
| Leakage curr. protection enable | Enable leakage current protection |
| Power saveing mode | After turning on the energy-saving mode, if the load is empty or less than 25W, the inverter output will be shut down after a delay of 5min; when the load is more than 40W, the inverter will start automatically. |
| CEI 0-21 auto check | Only,when the grid standard is "Italy CEI 021", this function will be available |
| CT manual setting | According to the CT installation, select the CT direction |

5.2.5.3. Restart

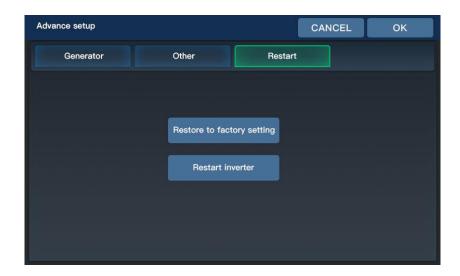

| Parameter Meaning | Description |
|--------------------------|-----------------------------|
| Restore Factory Settings | Reset all inverter settings |
| Reboot Inverter | Restart the inverter |




5.3、Time-slot charging/discharging function

The HESP series is equipped with a time-slot charging and discharging function, which allows users to set different charging and discharging periods according to the local peak and valley tariffs, so that the utility power and PV energy can be used rationally.

When mains electricity is expensive, the battery inverter is used to carry the load; when the mains electricity is cheap, the mains electricity is used to carry the load and charge, which can help customers to save electricity costs to the greatest extent.

The user can turn on/off the time-slot charging/discharging function in setup menu parameter 46 and 53.and set charging and discharging slot in parameter. Below are examples for users to understand the function.

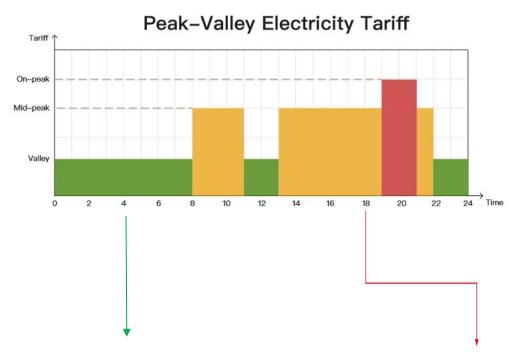

Time-slot Utility Charging/Carrying Function

0h 18h 2 6h 18h 3 6h 18h 12h 12h 12h 12h 12h 12h

With 3 definable periods, the user can freely set the mains charging/carrying time within the range of 00:00 to 23:59. During the time period set by the user, if PV energy is available, PV energy will be used first, and if PV energy is not available or insufficient, utility energy will be used as a supplement.

With 3 definable time periods, users can freely set the battery discharge time within the range of 00:00 to 23:59. During the time set by the user, the inverter will give priority to the battery inverter to carry the load, and if the battery power is insufficient, the inverter will automatically switch to mains power to ensure stable operation of the loa

Time-slot Battery Disacharging Function



5.4. Battery parameter

Lead-acid battery

| Battery type Parameters | Sealed lead acid battery (SLD) | Gel lead acid battery (GEL) | Flooded lead acid battery (FLD) | User-defined (USE) | Adjustable |
|---|--------------------------------------|-----------------------------------|---------------------------------------|-----------------------|------------|
| Overvoltage disconnection voltage | 60V | 60V | 60V | 60V | |
| Battery fully charged recovery point | 52V | 52V | 52V | 52V | V |
| Boost charge voltage | 57.6V | 56.8V | 57.6V | 40 ~ 60V | V |
| Undervoltage alarm voltage([01] fault) | 44V | 44V | 44V | 40 ~ 60V | ٨ |
| Undervoltage alarm voltage recovery point([01] fault) | | | | | |
| Low voltage disconnection voltage([04] fault) | 42V | 42V | 42V | 40 ~ 60V | ٧ |
| Low voltage disconnection voltage recovery point ([04] fault)(setup item [35]) | 52V | 52V | 52V | 52V | ٧ |
| Discharge limit voltage | - | - | - | 40 ~ 60V | V |
| Over-discharge delay time | 5s | 5s | 5s | 1 ~ 30s | V |
| Boost charge duration | - | - | - | 10 ~ 600 minutes | V |



Li-ion batter


| Battery type Parameters | Ternary (N13) | Ternary (N14) | LFP (L16) | LFP (L15) | LFP (L14) | Adjustable |
|---|---------------------------------|------------------|----------------|----------------|----------------|------------|
| Overvoltage disconnection voltage | 60V | 60V | 60V | 60V | 60V | |
| Battery fully charged recovery point | 50.4V | 54.8V | 53.6V | 50.4V | 47.6V | √ |
| Equalizing charge voltage | - | - | - | - | - | √ |
| Boost charge voltage | 53.2V | 57.6V | 56.8V | 53.2V | 49.2V | V |
| Undervoltage alarm voltage([01] fault) | 43.6V | 46.8V | 49.6V | 46.4V | 43.2V | √ |
| Undervoltage alarm voltage recovery point([01] fault) | Undervoltage alarm voltage+0.8V | | | | | |
| Low voltage disconnection voltage([04] fault) | 38.8V | 42V | 48.8V | 45.6V | 42V | √ |
| Low voltage disconnection voltage recovery point ([04] fault)(setup item [35]) | 46V | 49.6V | 52.8V | 49.6V | 46V | ٧ |
| Discharge limit voltage | 36.4V | 39.2V | 46.4V | 43.6V | 40.8V | √ |
| Over-discharge delay time | 30s | 30s | 30s | 30s | 30s | √ |
| Boost charge duration | 120 minutes | 120 minutes | 120 minutes | 120 minutes | 120 minutes | √ |



6. Communication

6.1. Dry contact

- 1. RSD power supply
- 2. Temperature sampling (reserved)
- 3. Generator remote start/stop
- 4.CT connection

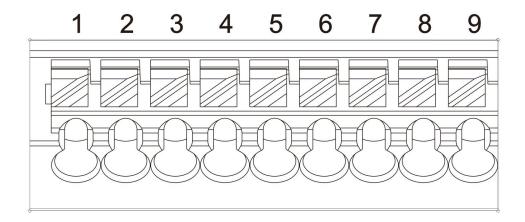

| Function | Description |
|---------------------------------|---|
| RSD power supply | PIN 1 is GND, PIN 3 is RSD 12V+ |
| Temperature sampling (reserved) | Pin 1 & Pin 2 can be used for battery temperature sampling compensation. |
| Generator remote start/stop | 4-5: NC 4-6:NO Remote generator shutdown: Pins 4 to 5 are normally closed, and pins 4 to 6 are normally open. (Pin 4/5/6 output 125Vac/1A,230Vac/1A,30Vdc/1A) |
| CT connection | PIN 8: CT-, PIN9:CT+ |


① NOTICE

If you need to use the remote start/stop function of the generator with dry contact, ensure that the generator has ATS and supports remote start/stop.



6.2、RS485/CAN communication port

1.RS485/CAN communication port for RS485 and CAN communication with lithium battery BMS;

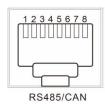

| RJ45 | Definition |
|-------|------------|
| Pin 1 | RS485-B |
| Pin 2 | RS485-A |
| Pin 3 | Gnd |
| Pin 4 | CANH |
| Pin 5 | CANL |
| Pin 6 | Gnd |
| Pin 7 | RS485-A |
| Pin 8 | RS485-B |

6.3、 DIP switch

The single inverter need to press down DIP 1,2.

When the inverters are in parallel, press down DIP 1,2 of the first and last inverters



6.4、WIFI port

The WIFI port is used to connect to the Wi-Fi/GPRS data acquisition module, which allows the user to view the operating status and

parameters of the inverter via the mobile




| RJ45 | Definition |
|-------|------------|
| Pin 1 | 5V |
| Pin 2 | GND |
| Pin 3 | / |
| Pin 4 | / |
| Pin 5 | / |
| Pin 6 | / |
| Pin 7 | RS485-A |
| Pin 8 | RS485-B |
| | |



6.5、USB-A port


It is used to updated the screen firmware

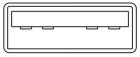

6.6、USB-B port

This port is a USB communication port, which can be used for USB communication with the selected upper computer software of our company (Need to apply for).

To use this port, the corresponding "USB to serial port chip CH340T driver" should be installed in the computer.

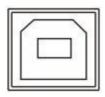


6.7. Parallel port

- a) This port is used for parallel communication, through which the parallel modules can communicate with each other.
- b) Each machine has two 8Pin ports, one for the parallel_A and one for the parallel_B.
- c) When connecting, make sure to connect the local Parallel_A to the parallelized machine Parallel_B, or the local Parallel_B should be connected to the parallelized machine Parallel_A.
- d) Do not connect local parallel A to local parallel B.






6.8 . External CT port

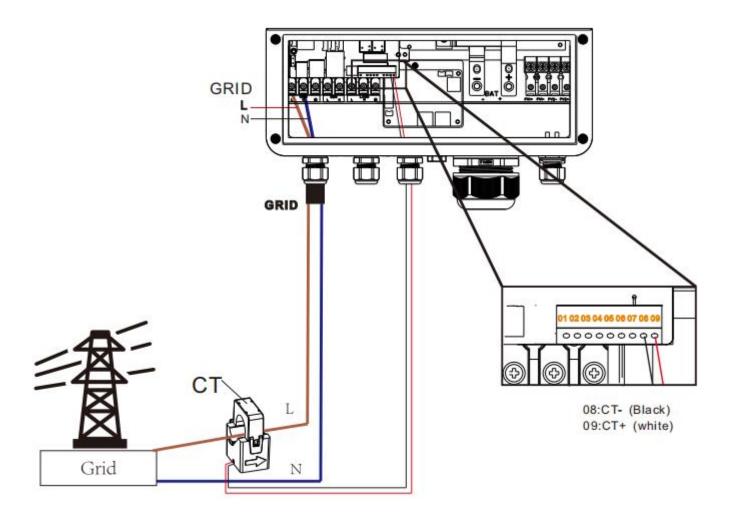

- 1. Split Core Current Transformer (CT) dimension: (mm)
- 2. Secondary output cable length is 4m.
- 3.The CT direction is "to inverter"

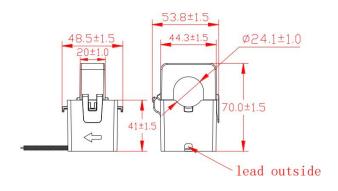





7. Fault and Remedy

7.1. Fault code

| Fault code | Fault name | Whether it affects the output or not | Description |
|------------|------------------|--------------------------------------|---|
| [01] | BatVoltLow | No | Battery undervoltage alarm. |
| [02] | BatOverCurrSw | Yes | Battery discharge average current overcurrent (software protection). |
| [03] | BatOpen | Yes | Battery not-connected alarm. |
| [04] | BatLowEod | Yes | Battery undervoltage stop discharge alarm. |
| [05] | BatOverCurrHw | Yes | Battery overcurrent (hardware protection). |
| [06] | BatOverVolt | Yes | Charging overvoltage protection. |
| [07] | BusOverVoltHw | Yes | Bus overvoltage (hardware protection). |
| [08] | BusOverVoltSw | Yes | Bus overvoltage (software protection). |
| [09] | PvVoltHigh | No | PV overvoltage protection. |
| [10] | PvOCSw | No | Boost overcurrent (software protection). |
| [11] | PvOCHw | No | Boost overcurrent (hardware protection). |
| [13] | OverloadBypass | Yes | Bypass overload protection. |
| [14] | OverloadInverter | Yes | Inverter overload protection. |
| [15] | AcOverCurrHw | Yes | Inverter overcurrent (hardware protection). |
| [17] | InvShort | Yes | Inverter short-circuit protection. |
| [19] | OverTemperMppt | No | Buck heat sink over temperature protection. |
| [20] | OverTemperInv | Yes | Inverter AC output with load or AC charging radiator over-temperature protection. |

53



| [21] | FanFail | Yes | Fan blockage or failure fault. |
|------|--------------------|-----|--|
| [22] | EEPROM | Yes | Memory failure. |
| [23] | ModelNumErr | Yes | Model setting error. |
| [26] | RlyShort | Yes | Inverted AC Output Backfills to Bypass AC Input. |
| [29] | BusVoltLow | Yes | Internal battery boost circuit failure. |
| [30] | BatCapacityLow1 | No | Alarm given when battery capacity rate is lower than 10% (setting BMS to enable validity). |
| [31] | BatCapacityLow2 | No | Alarm given when battery capacity rate is lower than 5% (setting BMS to enable validity). |
| [32] | BatCapacityLowStop | Yes | Inverter stops when battery capacity is low (setting BMS to enable validity). |
| [34] | CanCommFault | Yes | CAN communication fault in parallel operation. |
| [35] | ParaAddrErr | Yes | Parallel ID (communication address) setting error. |
| [37] | ParaShareCurrErr | Yes | Parallel current sharing fault . |
| [38] | ParaBattVoltDiff | Yes | Large battery voltage difference in parallel mode. |
| [39] | ParaAcSrcDiff | Yes | Inconsistent AC input source in parallel mode. |
| [40] | ParaHwSynErr | Yes | Hardware synchronization signal error in parallel mode. |
| [41] | InvDcVoltErr | Yes | Inverter DC voltage error. |
| [42] | SysFwVersionDiff | Yes | Inconsistent system firmware version in parallel mode. |
| [43] | ParaLineContErr | Yes | Parallel line connection error in parallel mode. |



| [44] | Serial number error | Yes | No serial number set at factory. | |
|----------------------|---------------------------------------|-----|---|--|
| [45] | Error setting of split- phase mode | Yes | Item "Parallel" setting error. | |
| [49] | Grid over voltage | Yes | | |
| [50] | Grid under voltage | Yes | | |
| [51] | Grid over frequency | Yes | | |
| [52] | Grid under frequency | Yes | selects the local corresponding grid standard. | |
| [53] | Grid loss | Yes | | |
| [54] | Grid DC current over | Yes | | |
| [55] | Grid standard un init | Yes | | |
| [56] | Low insulation resistance fault | No | PV1+, PV2+ and PV- abnormally low impedance to ground. | |
| [57] | Leakage current overload fault | Yes | System leakage current exceeds limit. | |
| [58] | BMS communication error | No | Check whether the communication line is connected correctly and whether BMS is set to the corresponding lithium battery communication protocol. | |
| [60] | BMS battery low temperature alarm | No | BMS alarm battery low temperature. | |
| [61] | BMS battery over temperature alarm | No | BMS alarm battery over temperature. | |
| [62] | BMS battery over current alarm | No | BMS alarm battery over current. | |
| [63] | BMS battery undervoltage alarm | No | BMS alarm low battery. | |



7.2. Troubleshooting

| Fault code | Faults | Remedy |
|---------------|--|--|
| Display | No display on the screen | Check if the battery switch or PV switch is closed; whether the switch is in the "ON" state; press any button on the screen to exit the screen sleep mode. |
| [06] | Battery overvoltage protection | Check that the battery voltage does not exceed the protection value. If it does, discharge the battery until the voltage falls below the battery over-voltage recovery point. |
| [01] [04] | Battery undervoltage protection | Charge the battery until it returns to the low voltage disconnection recovery voltage. |
| [21] | Fan failure | Check if the fan is not turning or blocked by foreign object. |
| [19] [20] | Heat sink over temperature protection | When the temperature of the device is cooled below the recovery temperature, normal charge and discharge control is resumed. |
| [13] [14] | Bypass overload protection, inverter overload protection | ① Reduce the use of power equipment;② Restart the unit to resume load output. |
| [17] | Inverter short-circuit protection | ① Check the load connection carefully and clear the short-circuit fault points;② Re-power up to resume load output. |
| [09] | PV overvoltage | Use a multimeter to check if the PV input voltage exceeds the maximum allowable input voltage rated. |
| [03] | Battery disconnected alarm | Check if the battery is not connected or if the battery circuit breaker is not closed. |
| [40] [43] | Parallel connection fault | Check if the parallel line is not connected well, such as loose or wrong connection. |
| [35] | Parallel ID setting error | Check whether the setting of parallel ID number is repeated. |
| [37] | Parallel current sharing fault | Check if the parallel current sharing line is not connected well, such as loose or wrong connection. |



| [39] | Inconsistent AC input source in parallel mode | Check whether the parallel AC inputs are from the same input interface. |
|------|---|---|
| [42] | Inconsistent system firmware version in parallel mode | Check whether the software version of each inverter is consistent. |
| [44] | Serial number error | Incorrect device serial number setting. |
| [45] | Parallel mode error | There is a device in the parallel system with the wrong parallel mode setting. |
| [49] | High grid voltage | Check that the grid voltage is within the normal range, if the grid voltage is abnormal, wait until the grid voltage is restored. |
| [50] | Low grid voltage | Check that the grid voltage is within the normal range, if the grid voltage is abnormal, wait until the grid voltage is restored. |
| [51] | High grid frequency | Check that the grid frequency is within the normal range, if the grid frequency is abnormal, wait until the grid frequency is restored. |
| [52] | Low grid frequency | Check that the grid frequency is within the normal range, if the grid frequency is abnormal, wait until the grid frequency is restored. |
| [53] | Grid unconnected | Check if the grid is correctly connected, e.g. if the switch is closed and if the grid is disconnected. |
| [54] | Grid-connected current with DC component over | Power down and restart the device, if it continues to report faults, contact the manufacturer after sales. |
| [56] | Low insulation resistance fault | Check that the system is well grounded and that the PV modules and cables are not worn. |
| [57] | Leakage current overload fault | Check that the system is well grounded and that the loads are not operating abnormally. |

① NOTICE

If you encounter a fault with the product that cannot be solved by the methods in the table above, please contact our after-sales service for technical support and do not disassemble the equipment yourself...



8. Protection and Maintenance

8.1. Protection features

| No | Protection Feature | Instruction |
|----|--|--|
| 1 | PV input current/power limiting protection | When the charging current or power of the PV array configured exceeds the PV input rated value, the inverter will limit the input power and charge at the rated. |
| 2 | PV input over-voltage | If the PV voltage exceeds the maximum value allowed by the hardware, the machine will report a fault and stop the PV boost to output a sinusoidal AC wave. |
| 3 | PV night reverse current protection | At night, the battery is prevented from discharging through the PV module because the battery voltage is greater than the voltage of PV module. |
| 4 | AC input over-voltage protection | When the AC input voltage of each phase exceeds 280V, the mains charging will be stopped and switched to the inverter mode. |
| 5 | AC input under-voltage protection | When the AC input voltage of each phase below 170V, the utility charging will be stopped and switched to the inverter mode. |
| 6 | Battery over-voltage protection | When the battery voltage reaches the over-voltage cut-off point, the PV and the utility will automatically stop charging to prevent the battery from being overcharged and damaged. |
| 7 | Battery under-voltage protection | When the battery voltage reaches the under-voltage cut-off point, the inverter will automatically stop the battery discharge to prevent damage from over-discharging the battery. |
| 8 | Battery over-current protection | After a period when the battery current exceeds that allowed by the hardware, the machine will switch off the output and stop discharging the battery. |
| 9 | AC output short-circuit protection | When a short-circuit fault occurs at the load output terminal, the AC output is immediately turned off and turned on after 1 second. If the output load terminal is still short-circuited after 3 attempts, the inverter must be manually restarted after first removing the short-circuit fault from the load before the normal output can be restored. |
| 10 | Heat sink over- temperature protection | When the internal temperature of the inverter is too high, the inverter will stop charging and discharging; when the temperature returns to normal, the inverter will resume charging and discharging. |
| 11 | Inverter over-load protection | After triggering the overload protection the inverter will resume output after 3 minutes, 5 consecutive overloads will switch off the output until the inverter is restarted. |



| | (102% < load < 125%) : alarm and output shutdown after 5min; (125% |
|--|---|
| | < load < 150%) : alarm and output shutdown after 10s. |
| | Load > 150%: alarm reported and output switched off after 5s. |
| AC output reverse | Prevents AC back flow from the battery inverter to the bypass AC input. |
| Bypass over-current protection | Built-in AC input over-current protection circuit breaker. |
| Bypass phase inconsistency protection | When the phase of the bypass input and the phase of the inverter split do not match, the inverter disables switching to the bypass output to prevent the load from dropping out or short-circuiting when switching to the bypass. |
| Charging short-circuit protection | When the external battery port is short-circuited in the PV or AC charging state, the inverter will protect and stop the output current. |
| Parallel connection error protection | In parallel operation, the equipment will be protected when the parallel line is lost. |
| Parallel battery voltage difference protection | In parallel operation, the equipment will be protected when the battery connection is inconsistent and the battery voltage is greatly different from that detected by the host. |
| Parallel AC voltage difference protection | In parallel operation, the equipment will be protected when the AC IN input connection is inconsistent. |
| Synchronization signal fault protection | The equipment will be protected when there is a fault in the guidance signal between parallel buses, causing inconsistent behavior of each inverter. |
| | Bypass over-current protection Bypass phase inconsistency protection Charging short-circuit protection Parallel connection error protection Parallel battery voltage difference protection Parallel AC voltage difference protection Synchronization signal |



8.2、Maintenance

To maintain optimum and long-lasting working performance, we recommend that the following items are checked twice a year.

- 1. Ensure that the airflow around the inverter is not blocked and remove any dirt or debris from the radiator.
- 2. Check that all exposed conductors are not damaged by sunlight, friction with other surrounding objects, dry rot, insect or rodent damage, etc. The conductors need to be repaired or replaced if necessary.
- 3. Verify that the indications and displays are consistent with the operation of the equipment, note any faults or incorrect displays and take corrective action if necessary.
- 4. Check all terminals for signs of corrosion, insulation damage, high temperatures or burning/discolouration and tighten terminal screws.
- 5. Check for dirt, nesting insects and corrosion, clean as required. Clean the insect screen regularly.
- 6. If the lightning arrester has failed, replace the failed arrester in time to prevent lightning damage to the inverter or other equipment of the user.



 Make sure that the inverter is disconnected from all power sources and that the capacitors are fully discharged before carrying out any checks or operations to avoid the risk of electric shock.

The Company shall not be liable for damage caused by:

- 1. Damage caused by improper use or use in a wrong location.
- 2. Photovoltaic modules with an open circuit voltage exceeding the maximum permissible voltage.
- 3. Damage caused by the operating temperature exceeding the restricted operating temperature range
- 4. Dismantling and repair of the inverter by unauthorised persons.
- 5. Damage caused by force majeure: damage during transport or handling of the inverter.



9. Datasheet

| MODEL | HESP4840S100-H | HESP4846S100-H | HESP4850S100-H HESP4855S100-H | HESP4860S100-H |
|----------------------------|---|----------------------------|----------------------------------|----------------------------|
| Inverter output | | | | |
| Rated Output Power | 4000W | 4600W | 5500W | 6000W |
| Max. Peak Power | 8000VA | 9200VA | 11000VA | 12000W |
| Rated Output Voltage | 230Vac (| Single phase) (200, | /208/220/240Vac sett | able) |
| Output voltage error | | ±5% | 6 | |
| Load Capacity of Motors | ЗНР | 4HP | 4HP | 4HP |
| Rated AC Frequency | | 50/60Hz : | ± 0.3Hz | |
| Waveform | | Pure Sine | e Wave | |
| Switch Time | | 10ms (ty | pical) | |
| Overload | After triggering the overload protection the inverter will resume output after 3 minutes, 5 consecutive overloads will switch off the output until the inverter is restarted. (102% <load<125%): (125%="" 10s.="" 150%):="" 5min;="" <="" after="" alarm="" and="" load="" output="" shutdown=""> 150%: alarm reported and output switched off after 5s.</load<125%):> | | | |
| AC OUT (on-grid) | | Jortea ana Gatpat Siv | Terred on arter 55. | |
| Rated Output Power | 4000W | 4600W | 5500W | 6000W |
| Max. Peak Power | 8000VA | 9200VA | 11000VA | 12000VA |
| Power factor | 0.8 leading to 0.8 lagging | 0.8 leading to 0.8 lagging | 0.8 leading to 0.8 lagging | 0.8 leading to 0.8 lagging |
| Rated voltage | 220/230Vac | 220/230Vac | 220/230Vac | 220/230Vac |
| Rated AC Frequency | 50/60Hz | 50/60Hz | 50/60Hz | 50/60Hz |
| Rated AC out current | 17.4Aac | 20Aac | 24Aac | 26Aac |
| THD | <3% | <3% | <3% | <3% |
| Battery | | | , | |
| Battery Type | | Li-ion / Lead-Acid | / User Defined | |
| Rated Battery Voltage | 48Vdc (minimum start-up voltage 44V) | | | |
| Voltage Range | | 40-60 | Vdc | |
| Max. Generator | COAda | | | |
| Charging Current | 60Adc | | | |
| Max. Grid Charging | 60Adc | | | |
| Current | | OUAG | | |
| Max. Hybrid Charging | 100Adc | | | |
| Current | TOUNGE | | | |
| PV input | | | | |
| Num. of MPP Trackers | | 2 | | |



| Max. PV array power | 3000W+3000W | 3500W+3500W | 4000W+4000W | 4500W+4500W |
|--------------------------|---------------------------------------|---------------------|-----------------------|-------------|
| Max. input current | 16/16Adc | | | |
| Max.PV Isc | 27A/27Adc | | | |
| Max. Voltage of Open | 500Vdc | | | |
| Circuit | | 50070 | | |
| MPPT Voltage Range | | 120-450 |)Vdc | |
| Grid / Generator input | | | | |
| Input Voltage Range | | 90-280 | Vac | |
| Frequency Range | | 50/60 | Hz | |
| Max.AC bypass current | | 40Aa | С | |
| Efficiency | | | | |
| MPPT Tracking | | 99.99 | V. | |
| Efficiency | | 99.97 | 70 | |
| Max Efficiency | | 97.59 | % | |
| European Efficiency | | 97% |) | |
| Protection | | | | |
| PV Input Lightning | | Yes | | |
| Protection | | res | | |
| Anti-islanding | · · · · · · · · · · · · · · · · · · · | | | |
| Protection | Yes | | | |
| PV String Input Reverse | Yes | | | |
| Polarity Protection | 163 | | | |
| Insulation Resistor | Yes | | | |
| Detection | | | | |
| Residual Current | V | | | |
| Monitoring Unit | Yes | | | |
| Output Over Current | Voc | | | |
| Protection | Yes | | | |
| Output Shorted | | Yes | | |
| Protection | | res | | |
| Surge Protection | | DC type II/A | C type II | |
| Over Voltage Category | DC type II/AC type III | | | |
| Certified specifications | | | | |
| On-grid standard | EN50549-1 | ,G99,NRS-097,CEI 02 | 1,VDE-ARN-4105,,UN | NE217002 |
| Safety | | IEC62109-1, IE | C62109-2 | |
| EMC | EN | I61000-6-1, EN61000 | 0-6-3, FCC 15 class B | 3 |
| RoHS | | Yes | | |
| Basic data | | | | |
| Parallel capacity | | 6 | | |
| Operating | | | 0.5 1 | |
| Temperature Range | | -25~60°C,>45 | °C derated | |
| Humidity range | | 0-100 | % | |
| Warranty | 5 years | | | |



| Noise | <60dB | |
|--------------------|-------------------------------------|--|
| Protection Degree | IP65 | |
| Cooling Method | Heat sink + intelligent fan cooling | |
| Self-consumption | <100W | |
| Dimensions | 556*345*182mm | |
| Weight | 22.1kg | |
| Communication port | RS485 / CAN / USB / Dry contact | |
| External Modules | Wi-Fi / GPRS | |
| (Optional) | | |