

USER MANUAL



Solar Hybrid Inverter

HESP4880SH3 HESP48100SH3 HESP48120SH3



CONTENTS

1.	Safety	1
	1.1 How to use this manual	
	1.2 Symbols in this manual	
	1.3 Safety instruction	
2.	Production Instructions	
		2
	2.1 Instructions	
	2.2 Features	
	2.3 System connection diagram	
	2.4 Production overview	
_	2.5 Dimension drawing	
3.	Installation	
	3.1 Select the mount location	6
	3.2 Mount the inverter	7
	3.3 Remove terminal protection cover and dust screen	7
4.	Connection	
	4.1 Three-phase mode	8
	4.2 Cable & circuit breaker requirement	
	4.3 AC input & output connection	
	4.4 Battery connection	
	4.5 PV connection	
	4.6 Dry contact connection	
	4.7 Grounding connection	
	4.8 Final assembly	
	4.9 Parallel wiring	
	4.9.1 Parallel operation	
	4.9.2 Cautions for parallel connection	
	4.9.3 Schematic diagram of parallel connection	14
5.	Operation	
	5.1 Operation and display panel	
	5.2 Setting	20
	5.2.1 Basic Setup	20
	5.2.2 Work Mode Setup	21
	5.2.3 Battery setup	24



5.2.4 On grid setup	27
5.2.5 Advance Setup	
5.3 Time-slot charging/discharging function	
5.4 Battery parameter	
6. Communication	
6.1 Overview	
6.2 USB-1 port	
6.3 WIFI port	
6.4 RS485 port	
6.5 CAN port	
6.6 USB-2 port	
6.7 DRMS(Only Australia)	
6.8 External CT port	
6.9 Dry contact port	
7. Fault and Remedy	40
7.1 Fault code	40
7.2 Troubleshooting	
8. Protection and Maintenance	
8.1 Protection function	43
8.2 Maintenance	
9. Datasheet	



1. Safety

1.1 How to use this manual

This manual contains important information, guidelines, operation and maintenance for the following products : HESP series 4880SH3, 48100SH3, 48120SH3 This manual must be followed during installation, use and maintenance.

1.2 Symbols in this manual

Anger	DANGER indicates a hazardous situations which if not avoided will result in death or serious injury.
A WARING	WARING indicates a hazardous situations which if not avoided could result in death or serious injury.
AUTION	CAUTION indicates a hazardous situations which if not avoided could result in minor or moderate injury.
<u>Λ</u> ΝΟΤΙCE	NOTICE provide some tips on operation of products.

1.3 Safety instruction

 This chapter contains important safety instructions. Read and keep this manual for future reference.


- Be sure to comply the local requirements and regulation to install this inverter.
- Beware of high voltage. Please turn off the switch of each power sources before and during the installation to avoid electric shock.
- For optimal operation of this inverter, select the appropriate cable size and the necessary protective devices as specified.
- Do not connect or disconnect any connections when the inverter working.
- Do not open the terminal cover when the inverter working.
- Make sure the inverter is well grounding.
- Be careful not to cause short-circuiting of the AC output and DC input.
- Do not disassembly this unit, for all repair and maintenance, please take it to the professional service center.
- Never charge a frozen battery.



2. Production Instructions

2.1 Instructions

HESP SH3 series is a new type of solar energy storage inverter control inverter integrating solar energy storage & utility charging and energy storage, AC sine wave output. It adopts DSP control and features high response speed, reliability, and industrial standard through an advanced control algorithm.

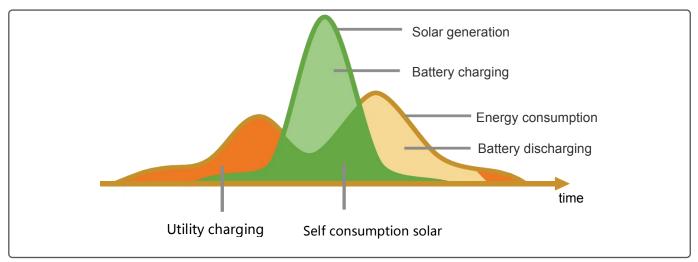

2.2 Features

- Supports lead-acid battery and li-ion battery connections.
- Smart load function.
- AC coupling function.
- With a dual activation function when the li-ion battery is dormant; either mains or photovoltaic power supply access can trigger the activation of the li-ion battery.
- Support three-phase pure sine wave output (350~415V).
- Supports phase voltage adjustment in the range of 200, 208, 220, 230, 240Vac.
- Supports two PV inputs, with the function of simultaneously tracking the maximum power charging or carrying capacity of two MPPT.
- Dual MPPT, efficiency up to 99.9%, single maximum current of 22A, perfectly adapted to high-power modules.
- 2 charging modes are available: solar only, grid and PV hybrid charging.
- With time-slot charging and discharging setting function, it helps users to take advantage of peak and valley tariffs and save electricity costs.
- Energy-saving mode function to reduce no-load energy losses.
- With two output modes of utility bypass and inverter output, with uninterrupted power supply function.
- LCD large screen dynamic flow diagram design, easy to understand the system data and



operation status.

■ 360° protection with complete short-circuit protection, over-current protection, over-voltage protection, under-voltage protection, over-load protection, etc.


Support CAN, USB, and RS485 communication.

2.3 System connection diagram


The diagram below shows the system application scenario of this product. A complete system consists of the following components:

- **PV modules :** converts light energy into DC energy, which can be used to charge the battery via an inverter or directly inverted into AC power to supply the load.
- **Utility grid or generator :** connected to the AC input, either of the connected utility and generator can charge the battery while supplying the load. When the batteries and photovoltaic modules supply the load, the system can operate without the utility or generator.
- **Battery**: The role of the battery is to ensure the normal power supply of the system loads in case of insufficient photovoltaic and no utility power.
- **Home load :** connects to a variety of home and office loads including refrigerators, lamps, TVs, fans, air conditioners and other AC loads.
- **Inverter :** it is the energy conversion device of the whole system.

The actual application scenario determines the specific system cabling.

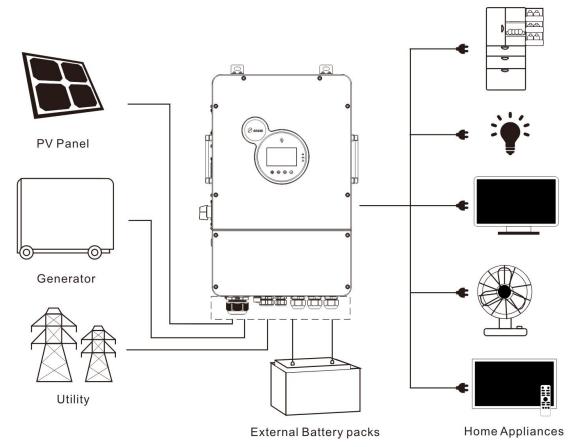


2.4 Production overview

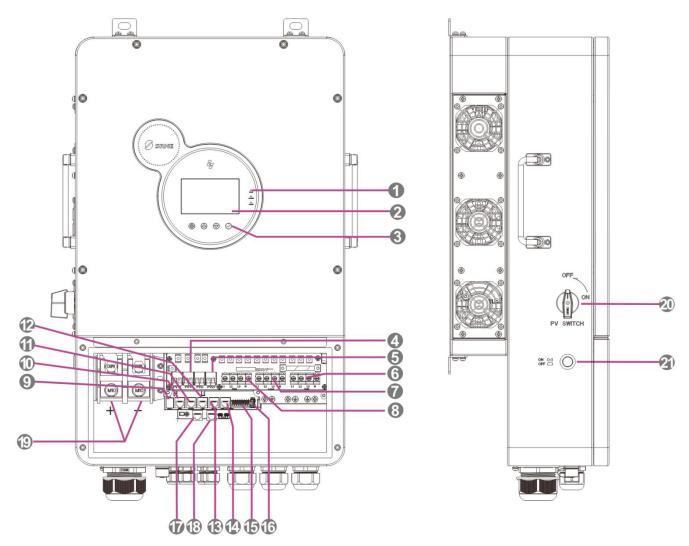

1	LED indicator	2	LCD screen	3	Physical key
4	PV1 terminals	5	PV2 terminals	6	Generator terminals (L1+L2+L3+N)
7	Load terminals (L1+L2+L3+N)	8	Grid terminals (L1+L2+L3+N)	9	USB-1
10	WIFI	11	485 port	12	CAN terminal
13	DRMS	14	Grid current(CT)	15	Dry contact
16	USB-2	17	Parallel communication B	18	Parallel communication A
19	Battery terminals	20	PV circuit breaker	21	ON/OFF switch



2.5 Dimension drawing

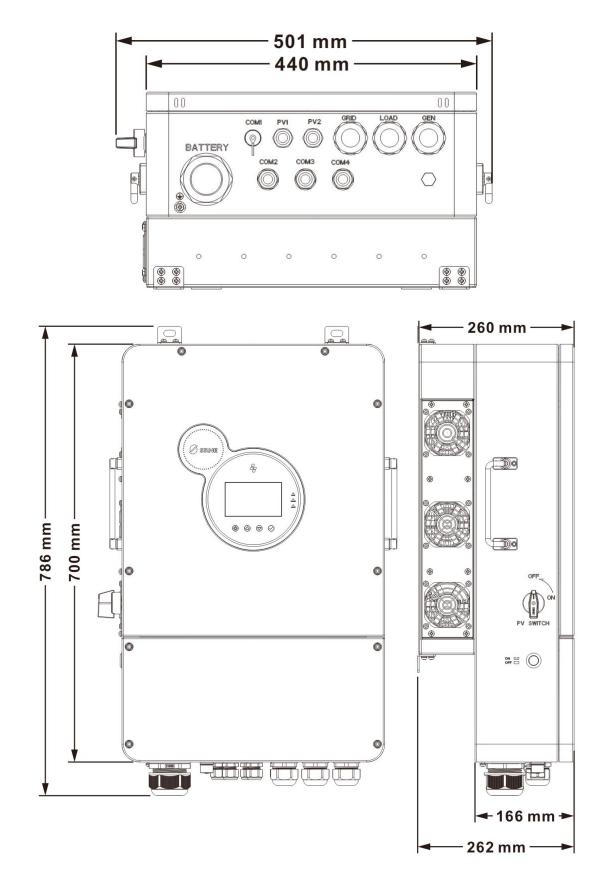




3. Installation

3.1 Select the mount location

HESP series can be used outdoors (protection class IP65). Please consider the followings before selecting the location :

Choose the solid wall to install the inverter.

- Mount the inverter at eye level.
- Adequate heat dissipation space must be provided for the inverter.
- The ambient temperature should be between-25~60°C (-13~140°F) to ensure optimal operation.

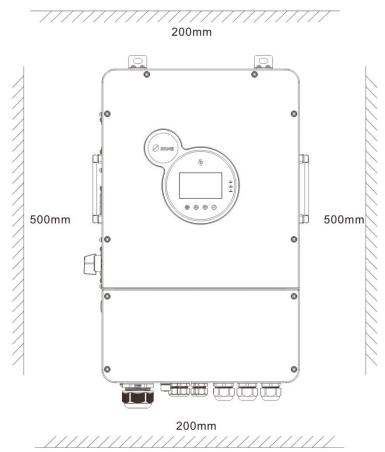

- Do not install the inverter near highly flammable materials.
- Do not install the inverter in a potentially explosive area.
- Do not install the inverter in a confined space with lead-acid batteries.


A CAUTION

- Do not install the inverter in direct sunlight.
- Do not install or use the inverter in a humid environment.




3.2 Mount the inverter

Punch 4 mounting holes in the wall with an electric drill according to the specified size, and insert 4 M8*60 expansion screws above.

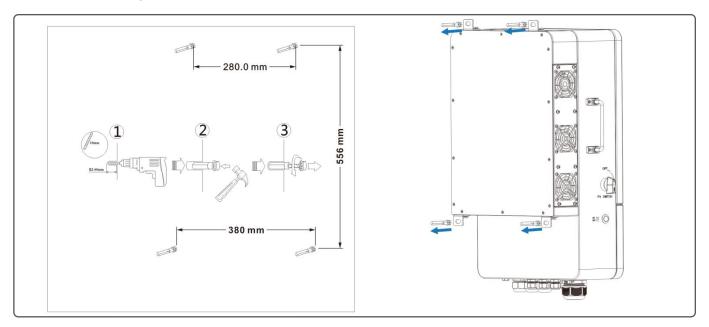

3.3 Remove terminal protection cover and dust screen

Using a screwdriver, remove the terminal protection cover and dust screen.

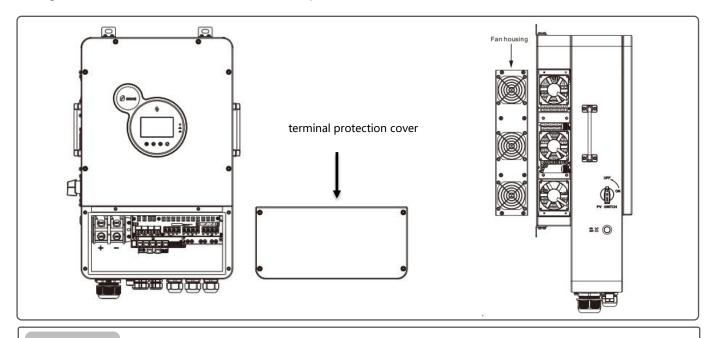


When using the device in areas with poor air quality, the dust screen is easily blocked by air particles. Please disassemble and clean the dust screen periodically to avoid affecting the internal air flow rate of the inverter, which may trigger an over-temperature protection fault (19/20 fault) affecting the use of the power supply and the service life of the inverter.



4. Connection

4.1 Three-phase mode

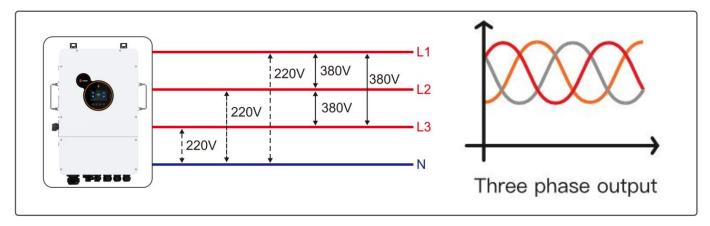

Items	Description
Applicable models	HESP series SH3 model
AC output phase voltage (L-N)	200~240Vac, 230Vac default

The user can change the output phase mode and output voltage through the setup menu, please read chapter 5.2 for details.

The output voltage corresponds to item [38] of the parameter setting, and the output phase voltage can be set within the range of 200V to 240V.

4.2 Cable & circuit breaker requirement

• PV input

Models	Cable Diameter	Max. PV Input Current	Circuit Breaker Spec
HESP4880SH3	5mm²/ 10 AWG	22A	2P-25A
HESP48100SH3	5mm²/ 10 AWG	22A	2P-25A
HESP48120SH3	5mm²/ 10 AWG	22A	2P-25A

• GRID

Models	Output Mode	Max. Phase Current	Cable Diameter	Circuit Breaker Spec
HESP4880SH3	Three-phase	23.2A	6mm²/8 AWG(L1/L2/L3/N)	4P-40A
HESP48100SH3	Three-phase	29A	7mm ² /8 AWG(L1/L2/L3/N)	4P-40A
HESP48120SH3	Three-phase	35A	7mm ² /8 AWG(L1/L2/L3/N)	4P-40A



Generator

Models	Output Mode	Max. Phase Current	Cable Diameter	Circuit Breaker Spec
HESP4880SH3	Three-phase	11.6A	5mm²/10AWG(L1/L2/L3/N)	4P-25A
HESP48100SH3	Three-phase	14.5A	5mm²/10AWG(L1/L2/L3/N)	4P-25A
HESP48120SH3	Three-phase	17.4A	5mm²/10AWG(L1/L2/L3/N)	4P-25A

• Battery

Models	Cable Diameter	Max. Current	Circuit Breaker Spec
HESP4880SH3	53mm²/ 0 AWG	180A	2P-200A
HESP48100SH3	67mm²/ 00 AWG	220A	2P-250A
HESP48120SH3	67mm²/ 00 AWG	260A	2P-300A

• LOAD

Models	Output Mode	Max.phase Current	Cable Diameter	Circuit Breaker Spec
HESP4880SH3	Three-phase	11.6A	6mm²/8 AWG(L1/L2/L3/N)	4P-40A
HESP48100SH3	Three-phase	14.5A	7mm²/8 AWG(L1/L2/L3/N)	4P-40A
HESP48120SH3	Three-phase	17.4A	7mm²/8 AWG(L1/L2/L3/N)	4P-40A


<u>∧</u> NOTICE

• PV input, AC input, AC output

Use a stripper to remove the 6~8mm insulation of the cable.
 Fixing a ferrule at the end of the cable (ferrule needs to be prepared by the user).

• Battery

Use a stripper to remove the 6~8mm insulation of the cable.
 Fixing cable lugs that supply with the box at the end of the cable.

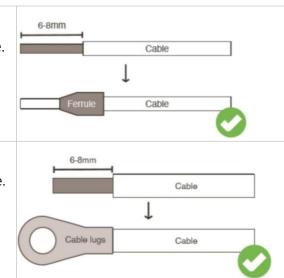


The wire diameter is for reference only. If the distance between the PV array and the inverter or between the inverter and the battery is long, using a thicker wire will reduce the voltage drop and improve the performance of the system.



4.3 AC input & output connection

Connect the live, neutral and ground cables in the position and order of the cables as shown in the diagram below.

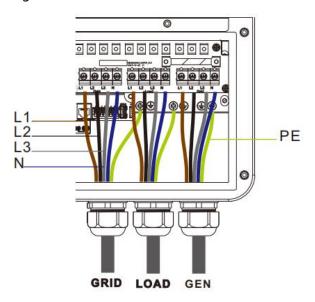


• Before connecting the AC input and output, the circuit breaker must be disconnected to avoid the risk of electric shock and must not be operated with electricity.

• Please check that the cable used is sufficient for the requirements, too thin, poor quality cables are a serious safety hazard.

4.4 Battery connection

Connect the positive and negative cable of the battery according to the diagram below.

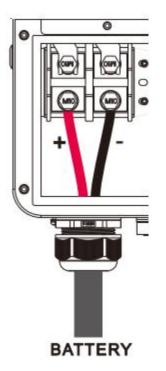

ANGER

• Before connecting the battery, the circuit breaker must be disconnected to avoid the risk of electric shock and must not be operated with electricity.


• Please ensure that the positive and negative terminals of the batteries are correctly connected and not reversed, otherwise the inverter may be damaged.

• Please check that the cable used is sufficient for the requirements, too thin, poor quality cables are a serious safety hazard.



4.5 PV connection

Connect the positive and negative wires of the two strings of PV according to the diagram below.

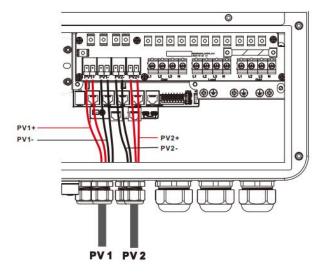

Anger


• Before connecting the PV, the circuit breaker must be disconnected to avoid the risk of electric shock and must not be operated with electricity.

• Make sure that the open-circuit voltage of the PV modules connected in series does not exceed the maximum open-circuit voltage of the inverter (the value is 800V), otherwise the inverter may be damaged.

4.6 Dry contact connection

Use a small screwdriver to push back the direction indicated by the arrow, and then insert the communication cable into the dry junction port.


(Communication cable cross section 0.2~1.5mm²)

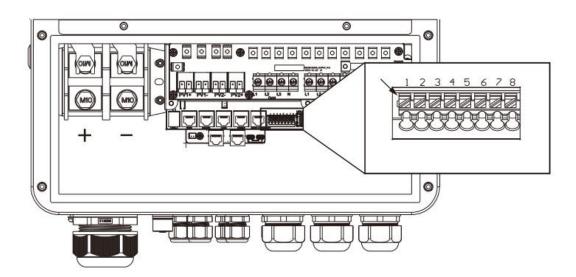



4.7 Grounding connection

Make sure that the earth terminal is securely connected to the grounding busbar.

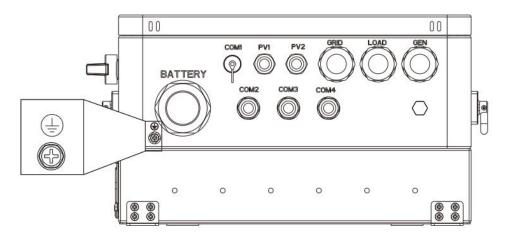

NOTICE

Grounding wire shall be not less than 4 mm² in diameter and as close as possible to the earthing point.

4.8 Final assembly

After ensuring that the wiring is reliable and the wire sequence is correct, restore the terminal protection cover to its original position.

Step 1 : Close the circuit breaker of the battery.

Step 2: Press the ON/OFF switch on the bottom of the inverter, the screen and the indicator light come on to indicate that the inverter is activated.

Step 3 : Sequential close of the circuit breakers for PV, AC input and AC output.

Step 4 : Start the loads one by one in order of power from small to large.

4.9 Parallel wiring


4.9.1 Parallel operation

1 The parallel operation supports up to six solar storage inverters.

② When using the parallel function, it is necessary to connect the parallel communication cable in a correct and reliable manner. See the figure blow for the communication cable (packaging

in a correct and reliable manner. See the figure blow for the communication cable (packaging accessory):

Parallel communication cable*1

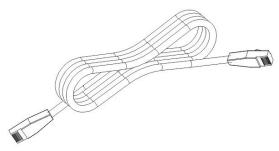



4.9.2 Cautions for parallel connection

🔥 Warning:

1. PV wiring:

In parallel connection, the PV array of each inverter must be independent, and the PV array of PV1 and PV2 for one inverter must also be independent.

2. Battery wiring

In single-phase or three-phase parallel connection, all solar storage inverters must be connected to the same battery, with BAT+ connected to BAT+ and BAT- to BAT-, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection.

3. LOAD wiring:

In single-phase parallel connection, all solar storage inverters must be connected in the manner of L-to-L, N-to-N, and PE-to-PE, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection. In three-phase parallel connection, all solar storage inverters must be connected in the manner of N-to-N and PE-to-PE. The L lines of all inverters in the same phase shall be connected together, but the AC output L lines of different phases shall not be connected together. Other cautions are the same as those for single-phase parallel connection.

4. GRID wiring:

In single-phase parallel connection, all solar storage inverters must be connected in the manner of L-to-L, N-to-N, and PE-to-PE, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection. Meanwhile, it is not allowed to have multiple different AC source inputs to avoid damage to the external equipment of the inverter. The AC source input shall be consistent and unique. In three-phase parallel connection, all solar storage inverters must be connected in the manner of N-to-N and PE-to-PE. The L lines of all inverters in the same phase shall be connected together, but the AC output L lines of different phases shall not be connected together. Other cautions are the same as those for single-phase parallel connection.

5. Communication wiring:

Our parallel communication cable is a shielded 10Pin network connection cable, which can be used for single-phase or three-phase parallel connection. Each machine must be connected with one out and one in. This means that the machine "Parallel_A" is connected to the machine to be parallelized "Parallel_B", and that the machine "Parallel_A" is not allowed to connect to the "Parallel_B". "Parallel_B" or "Parallel_A" is connected to the




machine to be parallelized "Parallel_A". At the same time, the parallel communication cable of each machine should be fastened with 10Pin network connection cable to avoid disconnection or poor contact of the parallel communication cable, which may cause abnormal operation or damage to the system output.

- 6. Before and after connecting the system, please carefully refer to the following system wiring diagrams to ensure that all wiring is correct and reliable before power on.
- **7.** After the system is correctly wired, powered on, and in normal operation, if a new inverter needs to be connected, make sure to disconnect the battery input, PV input, AC input and AC output, and that all solar storage inverters are powered off before reconnecting into the system.

4.9.3 Schematic diagram of parallel connection


The parallel mode need to be set as" parallel" for each inverters

a) Two units connected in parallel:

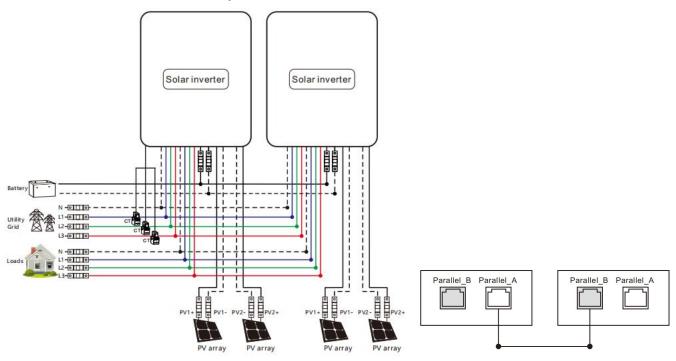




b) Three units connected in parallel:

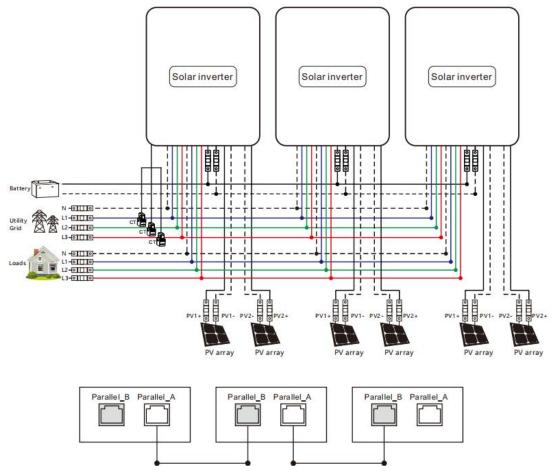


c) Four units connected in parallel:

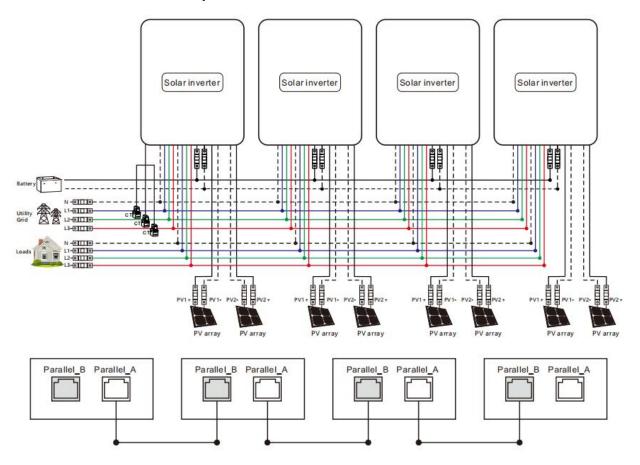




d) Five units connected in parallel:

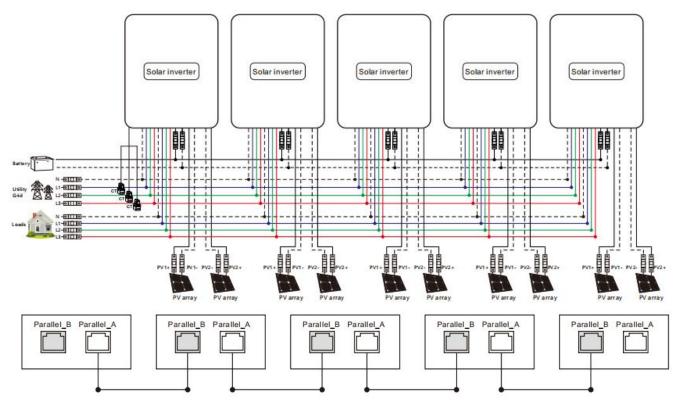

e) Six units connected in parallel:

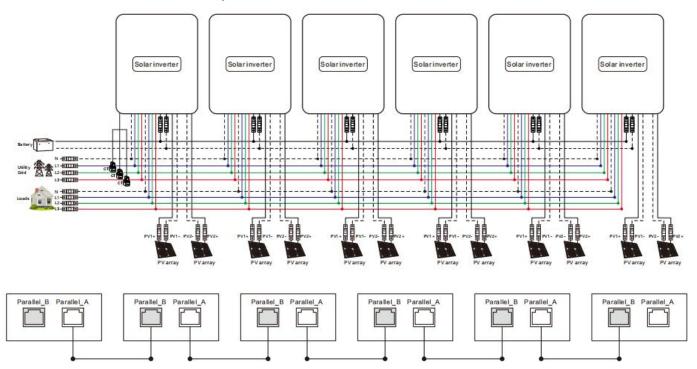





5. Operation

5.1 Operation and display panel

The operation and display panel below includes 1 LCD screen, 3 indicators, 4 touchable keys.

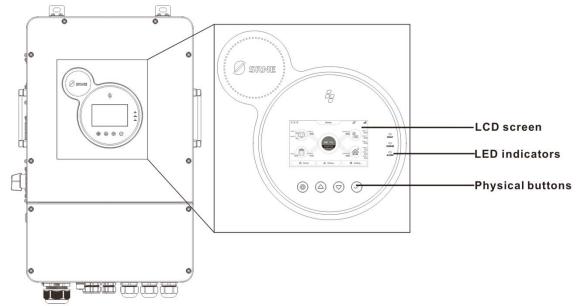

• Display panel

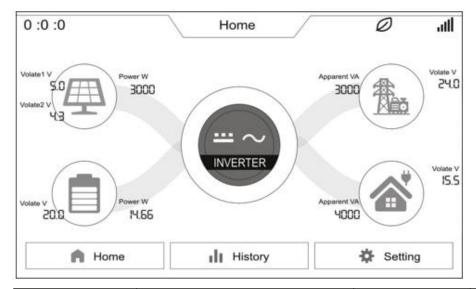

Icon	Description	Icon	Description
Æ	Solar panel		Load
	Battery	我	Grid or Generator
A Home	Home page	INVERTER	Inverter operating status



History	Historical data	Setting	Setting
0 :0 :0	Local time	ES	Buzzer Off
.111	BMS communicate status	دد د	Power flow direction

• Keys

Keys	Description
	To enter/exit the setting menu
\bigcirc	To last selection
\bigcirc	To next selection
\bigcirc	To confirm/enter the selection in setting menu

• LED Indicators

Indicators	Color	Description
FAULT	Red	Flash: error occur
CHARGE	Croon	Continued: charging complete
CHARGE	Green	Flash: charging
AC/INV	Vallaur	Continued: utility grid by-pass output
	Yellow	Flash: inverter output

• View real-time data

On the LCD home screen, click the inverter icon, battery icon, mains icon, load icon and photovoltaic icon to view the real-time data of the machine.

	System data			
No.	Item	No.	Item	
1	Machine state	12	SN	
2	MCU1 version	13	Min version number	
3	LCD version	14	Rated power	



4	MCU2 version	15	RS485 Address
5	External Temperature	16	Inverter temperature
6	PV temperature	17	Transformer Temperature
7	L1 Voltage	18	L1 Current
8	L2 Voltage	19	L2 Current
9	L3 Voltage	20	L3 Current
10	Positive busbar voltage	21	Negative busbar voltage
11	Total busbar voltage		
	Batter	y data	
1	SOH	6	Discharge current
2	SOC (Percentage of remaining battery capacity)	7	BMS protocol
3	Battery voltage	8	Battery type
4	Battery current	9	Battery Charge Status
5	Battery power (Battery charging and discharging power)		
	Grid	data	
1	L1 Voltage	8	L2 Voltage
2	L1 Current	9	L2 Current
3	L1 Active power	10	L2 Active power
4	L1 Apparent power	11	L2 Apparent power
5	L3 Voltage	12	L3 Active power
6	L3 Current	13	L3 Apparent power
7	Frequency	14	Grid charging Current
	Load	data	
1	L1 Voltage	11	L2 Voltage
2	L1 Current	12	L2 Current
3	L1 Active power	13	L2 Active power
4	L1 Apparent power	14	L2 Apparent power
5	L1 Home Load Power	15	L2 Home Load Power
6	L1 Secondary Load Apparent Power	16	L2 Secondary Load Apparent Power
7	L3 Voltage	17	L3 Apparent power
8	L3 Current	18	L3 Home Load Power




9	L3 Active power	19	L3 Secondary Load Apparent Power
10	Load Rate	20	Frequency
	PV	data	
1	PV1 voltage V	5	PV2 current
2	PV1 current A	6	PV2 power
3	PV1 power W	7	PV total Power
4	PV2 voltage V		

5.2 Setting

Operation Instructions: Click "Settings" in the menu bar at the bottom of the screen to enter the settings interface. It includes five categories of settings: Basic Setup, Work Mode Setup, Battery Setup, On grid Setup, and Advance Setup.

5.2.1 Basic Setup

5.2.1.1 Display Setup

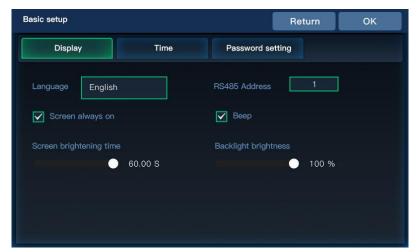

Parameter Meaning	Description
Language	English, Italia, German, Spanish, Chinese,Polski
RS485 Address	This refers to the RS485 address of the inverter. For a single unit, the
K3485 Address	adjustable range is $1\sim254$, and for parallel units, it is $1\sim6$
Screen always on	Selectable whether the screen is always on or not.
Веер	You can choice whether enable the Beep alarm.
Screen brightening time	Setting range 0 ~ 60 seconds.
Backlight brightness	0~100%



5.2.1.2 Time Setup

Basic setup		[Return	ОК
Display	Time	Password set	ting	
Year 2001	Month	Day 01	Week 01	
Hour 00	Minute 00	Second 00		

5.2.1.3 Password Setting (Password is required to access the Grid Settings and

Basic setup		Return	ОК
Display	Time	Password setting	
	New Password	0000	
	Confirm Password	0000	

Advanced Settings)

- Default password is "4321".
- Password setting value range:
 "0 ~ 9999"

5.2.2 Work Mode Setup

5.2.2.1 Work Mode





Wor	k mode setup			Return	ОК
	Work mode	Peak shaving			
<	Parallel Mode Stand-alone Parallel Input source system 1 Three-phase three Three-phase four	e-wire system	Output phase vo 200V 208V 220V 220V 230V 230V 240V	Diftage	

- Home Load: connected to the GRID port of the machine, requires external CT for monitoring.
- **UPS Load:** connected to the LOAD port of the machine.

Parameter Meaning	Option	Description		
	On grid	Direct grid connection of excess PV energy		
	Limit Power to ups	Ups load backflow prevention, photovoltaic or battery		
	load	energy is only for the ups load, excess energy will not be		
	1040	connected to the grid.		
		Backflow prevention for household loads, with solar or		
Hybrid grid mode	Limit Power to	battery energy supplied to UPS loads, smart loads and		
	home load	household loads, with no excess energy connected to the		
		grid.		
		Connect the grid-connected inverter to the grid side of		
	AC Coupling	the hybrid inverter, which uses the grid-connected energy		
		from the grid-connected inverter for carrying or charging.		
	When mixed grid mo	ode is set to "Limit Power to ups load" or when CT is not		
	connected, the following load refers to the ups load.			
	When mixed grid mode is set to "Limit Power to home load/On grid" and CT is			
PV energy manage	connected, the following load refers to the ups load plus the home load.			
	First to Load	PV power supply logic: load-charge-grid connection.		
	First to charging	PV power supply logic: charge-load-grid connection.		
	First to grid	PV power supply logic: load-grid connection-charge.		
Grid charging enable	Selectable grid partio	cipation in battery charging.		
	Standby	The battery does not discharge, and the battery is		
	Standby	discharged only when the working state is off the grid.		
_	Detterry to your load	When the PV power is less than the UPS load power, the		
Battery energy	Battery to ups load	battery discharge is added.		
manage	Battery to home	The battery can supply the power to UPS load, Smart load		
	load	and Home load.		
	Battery to grid sell	The battery can supply the power to grid.		
Parallel mode	Stand-alone			



	Single phase Parallel
Input source system	Three-phase three -wire system
type	Three-phase four -wire system
Output phase voltage	Settable : 200V,208V,220V,230V,240V

5.2.2.2 Peak Shaving

Work mode setup		[Return	ОК
Work mode	Peak shaving			
Timed chargin	g enable End Time Stop SC	DC Stop Volt	Max Power	Grid Gen
Start Time ① 00 : 00	00:00 100%		60W	
2 00:00	00 : 00 100%	60.0V	60W	
3 00 : 00	00 : 00 100%	60.0V	60W	
Timed dischar				
Start Time 1 00 : 00	End Time Stop SC 00 : 00 100%		Max Power 60W	2
 00 : 00 	00 : 00 100%	o 60.0∨	60W	
3 00:00	00 : 00 100%		60W	
Work mode setup			Return	ок
Work mode setup Work mode	Peak shaving		Return	ок
(T-	Peak shaving	(Return	ОК
Work mode	Peak shaving	(Return	ОК
Work mode Week enable	Peak shaving)	Return	ок
Work mode Week enable Monday	Peak shaving		Return	ОК
Work mode Week enable Monday	Peak shaving		Return	ОК
Work mode Week enable Monday Tuesday	Peak shaving		Return	ОК
Work mode Week enable Monday Tuesday Wednesday Thursday	Peak shaving		Return	ΟΚ

Parameter Meaning	Description	
Time charging/	Select whether to turn on timed charging and discharging.	
discharging enable		
Start/End Time	Setting the time period for timed charging and discharging.	
	Setting the battery charging cut-off SOC value and the cut-off SOC value for	
Stop SOC	discharging during the timed charging and discharging time period (during	
	BMS communication).	
	Setting the battery charging cut-off voltage value and discharging cut-off	
Stop Volt	voltage value during the timed charging and discharging time period (when the	
	BMS is not communicating).	
Max Power	Setting the battery charging power and discharging power during the timed	
	charging and discharging time period.	
Grid	When setting the timed charge, select the grid to charge the battery.	



Gen	When setting the timed charge, select the generator to charge the battery.
Week enable Sets the day of the week for timed	Sets the day of the week for timed charging/discharging (effective only for
Week enable	time-sharing charging/discharging).

5.2.3 Battery setup

5.2.3.1 Battery type

Battery setup	Return OK
Battery Type Battery Manage	BMS data
Battery chg. curr. limit mode	Batt Chg Temp Compensation enable Battery type
BMS protocol	User define BMS comm. protocol
BMS comm. interface	PACE
RS485	
CAN	

Parameter Meaning	Option	Description	
Battery chg. curr. limit	HMI setting	Maximum battery charging current is limited according to	
mode		the inverter battery charging current setting value.	
(Effective for BMS	BMS protocol	Maximum battery charging current is limited by the current	
communication)		limit value of the BMS.	
communication	Inverter logic	Maximum battery charging current is limited by the	
	inverter logie	machine's derating logic.	
	Disable	BMS does not communication.	
BMS comm. interface	RS485	BMS RS485 communication function	
	CAN	BMS CAN communication function	
Batt Chg Temp	Salact whathar to	turn on temperature compensation	
Compensation enable	Select whether to turn on temperature compensation		
	USER define	User customizable to set all battery parameters	
	SLd	Sealed Lead Acid Battery	
	FLd	Open-ended lead-acid batteries	
	GEL	gel lead-acid battery	
Battery Type	LFP/14/ 15/	Li-FePO4/14/15/16, corresponding to Li-FePO4 14 string,	
	LFP 16	15 string, 16 string	
	N13/ N14	Ternary lithium batteries, N13/N14, corresponding to	
		ternary lithium batteries 13 string, 14 string	
	No battery	Without battery	



	When the BMS port selection setting item = 485 or CAN, you need to select the
	corresponding lithium battery manufacturer brand for communication:
	1 : PACE-PACEEX 2 : RUDA-Ritar 3 : AOGUAN-=ALLGRAND BATTERY 4 :
BMS comm.protocol	OULITE-OLITER 5 : CEF-CHANGFENG TECNOLOGY 6 : XINWANGDA -
	SUNWODA 7: DAQIN -DAKING 8 : WOW-SRNE 9: PYL-PYLONTECH 10 : MIT-
	FOXESS 11: XIX-XYE 12: POL-POWERMR 13: GUOX-Gotion 14: SMK-SMK 15:
	VOL-WEILAN 16:UZE-YUZE

5.2.3.2 Battery Manage

Battery setup	Return OK
Battery Type Battery Manage	BMS data
Maximum chg. voltage 12.0V	Maximum chg. current 1.0A
Batt. Recharging voltage 12.0V	Max. chg. curr. by Grid 12.0A
Battery curr. stop chg. 1.0A	Bat. SOC stop chg.
	'
Battery setup	Return OK
Battery setup Battery Type Battery Manage	Return OK BMS data
Battery Type Battery Manage	BMS data Batt. SOC stop dischg. 10%
Battery Type Battery Manage Batt volt. stop dischg. 12.0V	BMS data Batt. SOC stop dischg. 10% in hybrid
Battery Type Battery Manage Batt volt. stop dischg. 12.0V Batt volt. restart dischg. 12.0V	BMS data Batt. SOC stop dischg. 10% in hybrid Batt. SOC restart dischg. 15%
Battery Type Battery Manage Batt volt. stop dischg. 12.0V Batt volt. restart dischg. 12.0V Battery under volt. alarm 12.0V	BMS data Batt. SOC stop dischg. in hybrid Batt. SOC restart dischg. 15% Batt under capacity alarm
Battery Type Battery Manage Batt volt. stop dischg. 12.0V Batt volt. restart dischg. 12.0V Battery under volt. alarm 12.0V Batt volt low recovery 12.0V	BMS data Batt. SOC stop dischg. In hybrid Batt. SOC restart dischg. 15% Batt under capacity alarm Batt. SOC low fault

Parameter Meaning	Description
Maximum cha voltago	When the battery is charging, the voltage reaches the value to enter thefloat
Maximum chg. voltage	state or stop charging.
Batt. Recharging	When the battery is fully charged, the inverter stops charging and resumes
voltage	charging when the battery voltage falls below this voltage value.
Battery curr. stop chg.	when the charging current falls below this setting, the battery will stop charge.
Maximum chg. current	Setting the amount of current when charging the battery
Max. chg. curr. by Grid	When using mains charging, set the size of the battery mains charging current
	(the value is the battery current)
Bat.SOC stop chg.	"Charging will stop when the SOC value reaches this set point (effective when



	BMS communication is normal)."
Batt volt. stop dischg.	The battery will stop discharging when it reaches this setting value in the mixed
Ball Volt. Stop dischig.	grid state (when there is grid access).
Patt volt restart discha	When the battery voltage is too low to discharge, the battery voltage needs to
Batt volt. restart dischg.	reach this setting to discharge again.
Pattony under volt	Battery under-voltage alarm point, when the battery voltage is lower than the
Battery under volt. alarm	judgment point, the under-voltage alarm will be reported and the output will
didiiii	not be turned off.
Patt valt low recovery	When the battery report voltage low fault, the battery voltage reach this
Batt volt low recovery	setting, the fault will be cleard.
	When in the off-grid state, the inverter will shut down due to the low voltage
Batt voltage low fault	of the battery; when in the hybrid grid state, the battery will stop outputting
	due to low voltage.
Battery max. curr.	Cat the may better discharger current
dischg.	Set the max battery discharger current
	In the hybrid grid state, the battery will stop discharging when the State of
Batt. SOC stop dischg.	Charge (SOC) is lower than this set value. In the off-grid state, the battery will
	continue to discharge when the SOC is lower than this set value.
Patt SOC roctart discha	When the battery report SOC low fault, the battery SOC reach this setting,
Batt. SOC restart dischg.	it can restart discharge(valid when BMS communication is normal).

5.2.3.2 BMS date(When the battery communicate with inverter)

Check the data that battery BMS uploade to inverter.

tery setup		Return	ОК
Battery Type	Battery Manage	BMS data	
Battery Voltage:	33.3V	Battery charge voltage:	33.3V
Battery Current:	33.3A	Charge current limit:	33.3A
Battery Temp.:	33.3°C	Discharge current limit:	33.3A
SOH:	33%	Battery rated capacity:	ззан
Number of battery cy	rcles: 4444	Battery remain capacity:	33AH
Alarms 1:	50000	Protection 1:	50000
Alarms 2:	50000	Protection 2:	50000



5.2.4 On grid setup

To enter this setting, you need to enter the password set by the user, the default password is "4321".

5.2.4.1 Basic



Parameter Meaning	Description
	Europe: EN 50549-1
	German: VDE-AR-N 4105:2018
Grid Standard	Other area: GNL
	Austria: TE-OVE
	Thailand: PEA-MEA
Grid Frequency	Selection of local grid frequency , 50Hz/60Hz
Sell Power Max	Setting the maximum grid-connected power
External CT ratio	When connecting an external CT, enter the ratio on the CT specification.
	Maximum power drawn from the grid. If the grid charging power + load
Buy power Max	power exceeds this setting, the machine reduces the charging power.
	(Setting range: 0 to rated power)
Zero-export power	Error calibration power in the case of backflow prevention, recommended setting 20-100W
On-Grid Reactive Power	Setting range 0-100%, % of reactive power
Reactive power over/under excited	Over indicates 0%-100% / Under indicates -100%-0%
On Grid PF	Setting range 0.8-1
Power factor over/under excited	Over indicates 0.8-1 / Under indicates -0.8 ~ -1



5.2.4.2 Enter Service(This setting is not recommended to be changed by the

customer, the value depend on the grid standard)

Dn grid setup		Return	ОК
Basic	Enter Service	Grid Protection	Other
Enter service enable			
Connect Voltage Low	234.5V	Connect Frequency Low	50.00Hz
Connect Voltage High	234.5V	Connect Frequency High	50.00Hz
Normal connect delay tir	ne 50S	Normal Connect Power Ramp Rate	50S
Reconnect delay time	50S	Reconnect Power Ramp Rate	50S
Reconnect delay time	50S	Reconnect Power Ramp Rate	50S

Parameter Meaning	Description
Enter Service enable	Grid-connect enable setting (on by default)
Connect Voltage Low	Grid-connected low voltage protection voltage
Connect Frequency Low	Grid-connected low-frequency protection points
Connect Voltage High	Grid-connected high-voltage protection voltage
Connect Frequency High	Grid-connected high-frequency protection points
Normal connect delay time	Grid normal connection, grid connection delay time
Normal connect Power Ramp Rate	Normal grid connection, rate of rise of grid-connected power
Reconnect delay time	Grid down reconnection, grid connection delay time
Reconnect Power Ramp Rate	Grid disconnection and reconnection, rate of rise of grid-connected power

5.2.4.3 Grid protection (it is not recommended that the user change this setting)

On grid setup			Return	ОК
Basic	Enter Service	Grid Protectio	n	Other
LV1 234.5V	Time 2ms	LF1 100HZ	Time	2ms
LV2 234.5V	Time 2ms	LF2 100HZ	Time	2ms
HV1 234.5V	Time 2ms	HF1 100HZ	Time	2ms
HV2 234.5V	Time 2ms	HF2 100HZ	Time	2ms



Parameter Meaning	Description
LV1	Class 1 undervoltage protection point
LF1	Class 1 underfrequency protection point
LV2	Class 2 undervoltage protection point
LF2	Class 2 underfrequency protection point
HV1	Class 1 overvoltage protection point
HF1	Class 1 overfrequency protection point
HV2	Class 2 overvoltage protection point
HF2	Class 2 overfrequency protection point
Time	Protection Response Time

5.2.4.4 Other (it is not recommended that users change this setting)



Parameter Meanin	Description	
Frequency Droop (F-P) enable	Adjustment of inverter output power according to grid frequency.	
Volt-Watt (V-P) curve enable	Regulates the active power of the inverter according to the set grid voltage.	
Volt-Var (V-Q) curve enable	Adjustment of the inverter reactive power according to the set grid voltage.	
Watt-Var (P-Q) curve enable	Adjustment of the inverter reactive power according to the set active power.	
Watt-PF (P-PF) curve enable	Adjustment of the inverter power factor according to the set active power.	
LVRT/HVRT enable	Adjustment of the grid HV ride-through / LV ride-through values.	
Reactive power percentage enable		




Discharge PF enable	
Charge PF enable	
DRMS Enable	Australia only

5.2.5 Advance Setup

To enter this setting, you need to enter the password set by the user, the default password is "4321".

5.2.5.1 Generator

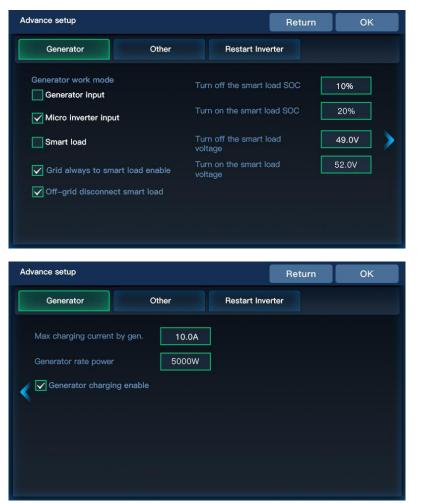

Parameter Meaning	Description		
Generator work mode	Generator Input	When the generator is connected to the "Gen	
		port", select the generator input.	
	Micro inverter	Grid-tie inverter is connected to the "Gen	
	input	port" of the hybrid inverter.	
	Smart load	When a load is connected to the "Gen port",	
		select the load output.	
Grid always to smart load	Whether to enable continuous power supply to the smart load.		
enable			



Off-grid disconnect smart load	Immediate Disconnect Smart Load Setting Item in Off-Grid Mode.
Turn off the smart load SOC	Battery current SOC is less than 10% to turn off smart loads, greater
Turn on the smart load SOC	than 20% to turn on smart loads.
Turn off the smart load voltage	The current voltage of the battery is less than 49V to turn off the smart
Turn on the smart load voltage	load, and more than 52V to turn on the smart load.
Max charging current by gen.	Maximum battery charging current of the generator.
Generator rate power	Setting the rated power of the generator.
Generator charging enable	Set whether the generator is charged or not.

5.2.5.2 Other




Parameter Meaning	Description
PE-N connect enable	Enable automatic switching of PE-N connections.
PV Riso check enable	Enable PV insulation impedance detection.
Leakage curr. protection enable	Enable leakage current protection.
BMS comm.error stop	When the BMS communication is fault, the inverter stop output.
Power saveing mode	After turning on the energy-saving mode, if the load is empty or less



	than 25W, the inverter output will be shut down after a delay of 5min;
	when the load is more than 40W, the inverter will start automatically.
MPPT scan	MPPT Global Scan Enable every 30 minutes.
CT manual setting	According to the CT installation, select the CT direction
Load Type	Select the load type according to the connected load.
Inverter Current Limiting	Adjust the current coefficient when the inverter is soft-started (this
coefficient	setting is not recommended to be modified by the customer).
Electric meter options	Whether to enable three-phase meter.
Smart mater connect point	Select on-grid inverter side or grid side according to meter
Smart meter connect point	installation location.

5.2.5.3 Restart

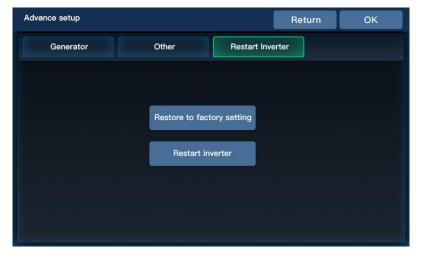


Parameter Meaning	Description
Restore Factory Settings	Reset all inverter settings
Reboot Inverter	Restart the inverter



5.3 Time-slot charging/discharging function

HESP SH3 series is equipped with time-slot charging / discharging function, users can set different charging/discharging time slots according to the local peak and valley electricity price, so as to make efficient use of utility power and PV energy. When the utility price is expensive, the battery inverter can be used to supply power to the loads. When the utility price is cheap, the utility power can be used to supply and charge the loads, which can help users save the electricity bill to the greatest extent. Users can turn on/off the time-sharing charging/discharging function in the setting menu parameters [46] and [53], and set the charging and discharging time periods in parameters [40-45], [47-52] for timed mains charging start/time setting and timed battery discharging start/time setting. Here is a case example to help users understand the function.

Before using this function for the first time, please set the local time in parameter [54], [55], then the user can set the corresponding time slot according to the local peak and valley tariff charges.

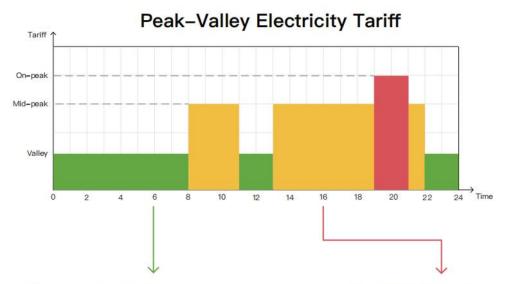

Time-slot Utility Charging/Carrying Function



With 3 definable periods, the user can freely set the mains charging/carrying time within the range of 00:00 to 23:59. During the time period set by the user, if PV energy is available, PV energy will be used first, and if PV energy is not available or insufficient, utility energy will be used as a supplement.

Time-slot Battery Disacharging Function



With 3 definable time periods, users can freely set the battery discharge time within the range of 00:00 to 23:59. During the time period set by the user, the inverter will give priority to the battery inverter to carry the load, and if the battery power is insufficient, the inverter will automatically switch to mains power to ensure stable operation of the load.



5.4 Battery parameter

• Lead-acid battery

Battery type Parameters	Sealed lead acid battery (SLD)	Gel lead acid battery (GEL)	Flooded lead acid battery (FLD)	User-defined (USE)	Adjustable
Overvoltage disconnection voltage	60V	60V	60V	60V	
Battery fully charged recovery point	52V	52V	52V	52V	\checkmark
Boost charge voltage	-	-	-	40~60V	\checkmark
Undervoltage alarm voltage([01] fault)	44V	44V	44V	40~60V	\checkmark
Undervoltage alarm voltage recovery point([01] fault)	ι				
Low voltage disconnection voltage([04] fault)	42V	42V	42V	40~60V	\checkmark
Low voltage disconnection voltage recovery point ([04] fault)(setup item [35])	52V	52V	52V	52V	\checkmark
Discharge limit voltage	-	-	-	40~60V	\checkmark
Over-discharge delay time	5s	5s	5s	1 ~ 30s	\checkmark
Boost charge duration	_	-	-	10 ~ 900 minutes	\checkmark

• Li-ion battery


Battery type Parameters	Ternary (N13)	Ternary (N14)	LFP (L16)	LFP (L15)	LFP (L14)	Adjustable
Overvoltage disconnection voltage	60V	60V	60V	60V	60V	
Battery fully charged recovery point	50.4V	54.8V	53.6V	50.4V	47.6V	\checkmark
Equalizing charge voltage	-	-	-	-	-	\checkmark
Boost charge voltage	53.2V	57.6V	56.8V	53.2V	49.2V	√
Undervoltage alarm voltage([01] fault)	43.6V	46.8V	49.6V	46.4V	43.2V	\checkmark



Undervoltage alarm voltage recovery point([01] fault)		Undervoltage alarm voltage+0.8V				
Low voltage disconnection voltage([04] fault)	38.8V	42V	48.8V	45.6V	42V	\checkmark
Low voltage disconnection voltage recovery point ([04] fault)(setup item [35])	46V	49.6V	52.8V	49.6V	46V	V
Discharge limit voltage	36.4V	39.2V	46.4V	43.6V	40.8V	\checkmark
Over-discharge delay time	30s	30s	30s	30s	30s	V
Boost charge duration	120 minutes	120 minutes	120 minutes	120 minutes	120 minutes	

D NOTICE


If no BMS is connected, the inverter will charge according to battery voltage with a preset charging curve. When the inverter communicates with the BMS, it will follow the BMS instructions to perform a more complex stage charging process.

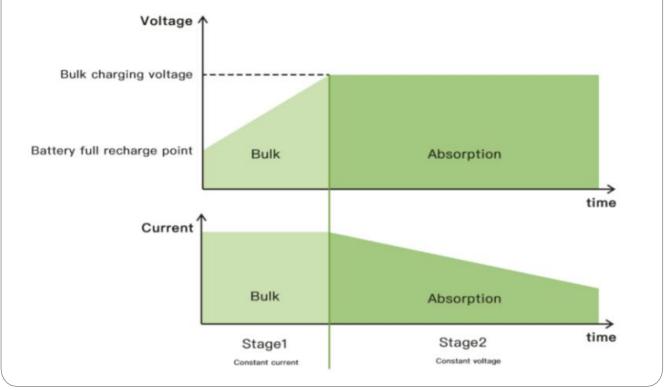




6. Communication

6.1 Overview

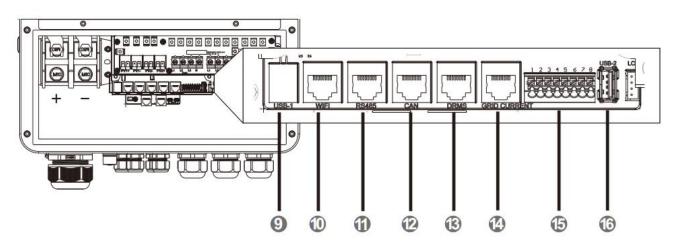

9	USB-B port	10	WIFI port	
11	RS485 port	12	CAN port	
13	DRMS port	14	CT port	
15	Dry contact	16	USB-A port	


6.2 USB-1 port

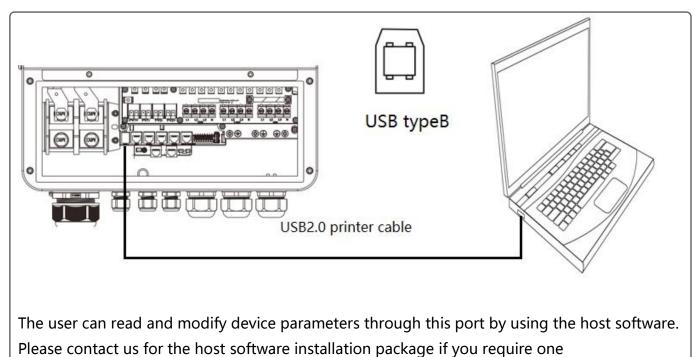




6.3 WIFI port

The WIFI port is used to connect to the Wi-Fi/GPRS logger module, which allows users to view the operating status and parameters of the inverter via mobile phone APP.

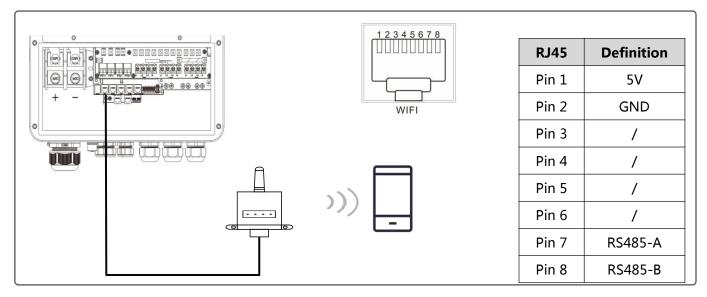

6.4 RS485 port

The RS485/CAN port is used to connect to the BMS of Liion battery.



Definition RS485-B RS485-A / CANH CANL / RS485-A RS485-B	RJ45	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
	Definitio	n RS485-B	RS485-A	/	CANH	CANL	/	RS485-A	RS485-B

/ NOTICE

If you need to use the inverter to communicate with the lithium battery BMS, please contact us for the communication protocol or upgrade the inverter to the appropriate software programme.

6.5 CAN port

The CAN port is used to connect to the BMS of Liion battery .

12345678									
	RJ45	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
	Definition	/	/	/	CANH	CANL	/	/	/
					-	-			

CAN



6.6 USB-2 port

It is used to updated the screen firmware.

|--|--|


6.7 DRMS(Only Australia)

Definition DRM5 DRM6 DRM7 DRM8 RefGen COM/ DRM0 V+ V-		RJ45	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
		Definition	DRM5	DRM6	DRM7	DRM8	RefGen		V+	V-

DRMS


MODEL		asserted by ng pins	Requirement
DRM0	5	6	Operate the disconnection device.
DRM5	1	5	Do not generate power to grid.
DRM6	2	5	Do not generate at more than 50% of rated power.
DRM7	3	5	Do not generate at more than 75% of rated power AND Sink reactive power if capable.
DRM8	4	5	Increase power generation (subject to constraints from other active DRMs) .

6.8 External CT port

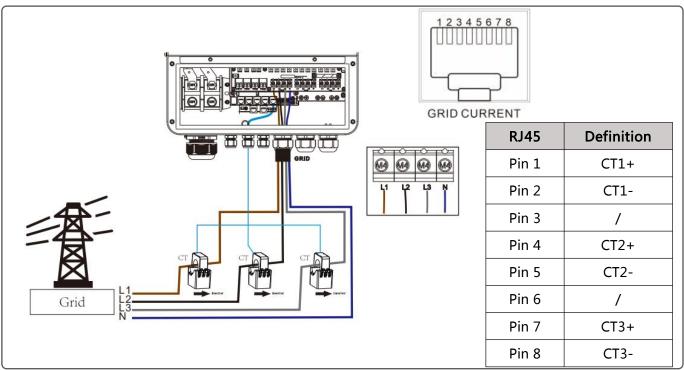




- 1. Split Core Current Transformer (CT) dimension: (mm)
- 2. Secondary output cable length is 4m.

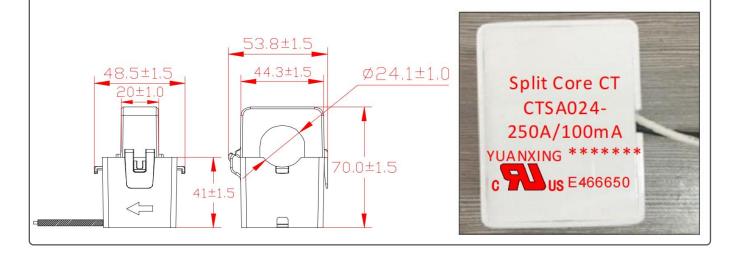

6.9 Dry contact port

Dry contact port with 3 functions:

- 1. RSD power supply
- 2. Temperature sampling (reserved)
- 3. Generator remote start/stop

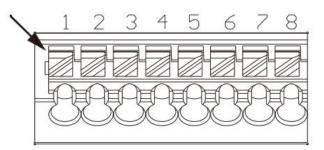

Function	Description
RSD power supply	PIN 1 is GND, PIN 2 is RSD 12V+
Temperature sampling (reserved)	Pin 1 & Pin 5 can be used for battery temperature sampling compensation.
	6-7 : NC 6-8:NO
Generator remote start/stop	Remote generator shutdown: Pins 6 to 7 are normally closed, and pins 6 to 8 are normally open.
	(Pin 6/7/8 output 125Vac/1A,230Vac/1A,30Vdc/1A)

NOTICE

If you need to use the remote start/stop function of a dry contact generator, make sure that the generator has an ATS and supports the remote start/stop function.



7. Fault and Remedy

7.1 Fault code

Fault	Fault name	Whether it affects	Description
code		the output or not	Description
【01】	BatVoltLow	No	Battery undervoltage alarm.
【02】	BatOverCurrSw	Yes	Battery discharge average current overcurrent (software protection).
【03】	BatOpen	Yes	Battery not-connected alarm.
【04】	BatLowEod	Yes	Battery undervoltage stop discharge alarm.
【05】	BatOverCurrHw	Yes	Battery overcurrent (hardware protection).
【06】	BatOverVolt	Yes	Charging overvoltage protection.
【07】	BusOverVoltHw	Yes	Bus overvoltage (hardware protection).
【08】	BusOverVoltSw	Yes	Bus overvoltage (software protection).
【09】	PvVoltHigh	No	PV overvoltage protection.
【10】	PvOCSw	No	Boost overcurrent (software protection).
【11】	PvOCHw	No	Boost overcurrent (hardware protection).
【12】	SpiCommErr	Yes	SPI communication fault of master and slave chips
【13】	OverloadBypass	Yes	Bypass overload protection.
【14】	OverloadInverter	Yes	Inverter overload protection.
【15】	AcOverCurrHw	Yes	Inverter overcurrent (hardware protection).
【16】	AuxDSpReqOffPW M	Yes	Slave chip OFF request fault
【17】	InvShort	Yes	Inverter short-circuit protection.
【18】	Bussoftfailed	Yes	Bus soft-start failure
【19】	OverTemperMppt	No	Buck heat sink over temperature protection.
【20】	OverTemperInv	Yes	Inverter AC output with load or AC charging radiator over-temperature protection.
【21】	FanFail	Yes	Fan blockage or failure fault.
【22】	EEPROM	Yes	Memory failure.
【23】	ModelNumErr	Yes	Model setting error.
【24】	Busdiff	Yes	Positive and negative bus voltage imbalance
【25】	BusShort	Yes	Bus short-circuit
【26】	RlyShort	Yes	Inverted AC Output Backfills to Bypass AC Input.
【27】	LinePhaselose	Yes	Grid input phase lose
【28】	LinePhaseErr	Yes	Grid input phase error



【29】	BusVoltLow	Yes	Internal battery boost circuit failure.
【30】	BatCapacityLow1	No	Alarm given when battery capacity rate is lower than 10% (setting BMS to enable validity).
【31】	BatCapacityLow2	No	Alarm given when battery capacity rate is lower than 5% (setting BMS to enable validity).
【32】	BatCapacityLowSto p	Yes	Inverter stops when battery capacity is low (setting BMS to enable validity).
【33】	ControlCanFault	Yes	Control CAN fault in parallel operation.
【34】	CanCommFault	Yes	CAN communication fault in parallel operation.
【35】	ParaAddrErr	Yes	Parallel ID (communication address) setting error.
【36】	Balance currentOC	Yes	Balance bridge arm overcurrent failure
【37】	ParaShareCurrErr	Yes	Parallel current sharing fault .
【38】	ParaBattVoltDiff	Yes	Large battery voltage difference in parallel mode.
【39】	ParaAcSrcDiff	Yes	Inconsistent AC input source in parallel mode.
【40】	ParaHwSynErr	Yes	Hardware synchronization signal error in parallel mode.
【41】	InvDcVoltErr	Yes	Inverter DC voltage error.
【42】	SysFwVersionDiff	Yes	Inconsistent system firmware version in parallel mode.
【43】	ParaLineContErr	Yes	Parallel line connection error in parallel mode.
【44】	Serial number error	Yes	No serial number set at factory.
【45】	Error setting of split-phase mode	Yes	Item "Parallel" setting error.
【49】	Grid over voltage	Yes	
【50】	Grid under voltage	Yes	
【51】	Grid over frequency	Yes	
【52】	Grid under frequency	Yes	selects the local corresponding grid standard.
【53】	Grid loss	Yes	
【54】	Grid DC current over	Yes	
【55】	Grid standard un init	Yes	
【56】	Low insulation resistance fault	No	PV1+, PV2+ and PV- abnormally low impedance to ground.
【57】	Leakage current overload fault	Yes	System leakage current exceeds limit.
【58】	BMS	No	Check whether the communication line is



	communication		connected correctly and whether [33] is set to	
	error		the corresponding lithium battery	
			communication protocol.	
[60]	BMS battery low	No	BMS alarm battery low temperature.	
[00]	temperature alarm	NO	Bivis alarm battery low temperature.	
【61】	BMS battery over	No	BMS alarm battery over temperature.	
LOIL	temperature alarm	INO		
[62]	BMS battery over	No	PMS alarm batton, over current	
[02]	current alarm	INO	BMS alarm battery over current.	
[63]	BMS battery	No	BMS alarm low battery.	
[05]	undervoltage alarm	INU		

7.2 Troubleshooting

Fault Code	Meaning	Causes	Remedy
/	No screen display	No power input, or the switch on the bottom of the unit is not switched on.	Check whether the battery air circuit- breaker or PV air circuit-breaker is turned on. Check if the switch is "ON". Press any button on the screen to exit the screen sleep mode.
01	Battery under-voltage	The battery voltage is lower than the value set in parameter [14].	Charge the battery and wait until the battery voltage is higher than the value set in parameter [14].
03	Battery not connected	The battery is not connected, or the BMS is in discharge protection state.	Check that the battery is reliably connected. Check that the battery circuit-breaker is off. Ensure that the BMS is able to communicate properly.
04	Battery over-discharge	The battery voltage is lower than the value set in parameter [12].	Manual reset: Switch off and restart. Automatic reset: Charge the battery so that the battery voltage is higher than the value set in parameter item [35].
06	Battery over-voltage when charging	Battery is in over-voltage condition.	Manually power off and restart. Check to see if the battery voltage exceeds the limit. If it exceeds, the battery needs to be discharged until the voltage is below the battery over-voltage recovery point.
13	Bypass over-load (software detection)	Bypass output power or output current over-load for a period of time.	Reduce the load power and restart the device. Please refer to item 11 of the protection function for more details.



	Inverter over-	Inverter output power or			
14 load(software		output current over-load			
	detection)	for a period of time.			
	Heat sink of PV input	Heat sink of PV input			
19	over-temperature	temperature exceeds	Normal charging and discharging is resumed when the temperature of the heat		
	(software detection)	90℃ for 3s.			
	Heat sink of inverter	Heat sink of inverter	sink cools below the over-temperature		
20	output over-	output temperature	recovery temperature.		
	temperature (software	exceeds 90°C for 3s.	, i		
	detection)				
		Hardware detects fan	Manually toggle the fan after powering off		
21	Fan failure	failure.	the machine to check for foreign matter		
			blockage.		
			Manually turn off and restart the machine,		
26	AC input relay short-	Relay for AC input	if the fault reappears after restarting, you		
20	circuit	sticking.	need to contact the after-sales service to		
			repair the machine.		
20	Utility input phase	AC input phase does not	Make sure that the phase of the AC input is		
28	fault	match AC output phase.	the same as the phase of the AC output.		

NOTICE

If you encounter product faults that cannot be solved by the methods in the above table, please contact our after-sales service department for technical support and do not disassemble the equipment by yourself.

8. Protection and Maintenance

8.1 Protection function

No.	Protection functions	Description	
	DV input current (nower	When the charging current or power of the PV array configured	
1	PV input current / power limiting protection	exceeds the PV input rated value, the inverter will limit the input	
		power and charge at the rated.	
		If the PV voltage exceeds the maximum value allowed by the	
2	PV input over-voltage hardware, the machine reports a fault and stops PV boosting	hardware, the machine reports a fault and stops PV boosting to	
		output a sinusoidal AC waveform.	
2	Anti-reverse charge	At night, the battery will be prevented from discharging to the PV	
3	protection at night	module because the battery voltage is greater than the PV module	

💋 SRN	E
-------	---

		voltage.
4	AC input over-voltage	When the mains voltage of per phase exceeds 280Vac, the mains
	protection	charging will be stopped and will switch to inverter output.
5		When the mains voltage of per phase falls below 170Vac, the mains
_	protection	charging will be stopped and will switch to inverter output.
	Battery over-voltage	When the battery voltage reaches the over-voltage disconnection
6	protection	voltage point, it will automatically stop the PV and mains charging of
		the battery to prevent over-charging and damage to the battery.
	Battery under-voltage	When the battery voltage reaches the low-voltage disconnection
7	protection	voltage point, it will automatically stop discharging the battery to
	protection	prevent the battery from being over-discharged and damaged.
8	Battery over-current	When the battery current exceeds the range allowed by hardware, the
0	protection	machine will turn off output and stop discharging the battery.
		When a short-circuit fault occurs at the load, the AC output voltage
	AC output short-circuit	will be switched off immediately and output again after 1 min. If the
9		output load is still short-circuited after 3 attempts, short-circuit fault
	protection	of the load must be eliminated first and then manually re-powered in
		order to restore the normal output.
	Heat sink over-	When the internal temperature of the inverter is too high, the inverter
10	temperature protection	will stop charging and discharging; when the temperature returns to
		normal, the inverter will resume charging and discharging.
		Three phase overload logic:
	Inverter over-load	After triggering the overload protection, the inverter will resume
		output after 3 minutes, 5 consecutive overloads will shut down
		the output until the inverter is restarted.
11		(102% < load < 110%):alarm,output shut down after 5 minutes.
	protection	(110% <load<125%):alarm, 20s.<="" after="" down="" output="" shut="" td=""></load<125%):alarm,>
		(125% < load < 200%):alarm, output shut down after 10s.
		Single phase overload logic:
		1.5*(102% <load<110%) 5="" :alarm,="" after="" down="" minutes.<="" output="" shut="" td=""></load<110%)>
		1.5*(load>110%): alarm, output shut down after 10s.
12	AC output reverse	Prevents backfeeding of battery inverter AC to bypass AC inputs.
13	Bypass over-current protection	Built-in AC input overcurrent protection circuit breaker.
		When the phase of the two bypass inputs is different from the phase
	Bypass phase	of the inverter phase split, the machine will prohibit cutting into the
14	inconsistency protection	bypass to prevent the load from dropping out or short-circuiting
		when cutting into the bypass.
L	1	



8.2 Maintenance

To maintain optimum long-lasting working performance, it is recommended that the following items be checked twice a year.

- 1. Ensure that the airflow around the inverter is not blocked and remove any dirt or debris from the radiator.
- 2. Check that all exposed conductors are not damaged by sunlight, friction with other surrounding objects, dry rot, insect or rodent damage, etc. The conductors need to be repaired or replaced if necessary.
- 3. Verify that the indications and displays are consistent with the operation of the equipment, note any faults or incorrect displays and take corrective action if necessary.
- 4. Check all terminals for signs of corrosion, insulation damage, high temperatures or burning/discolouration and tighten terminal screws.
- 5. Check for dirt, nesting insects and corrosion, clean as required, clean insect screens regularly.
- 6. If the lightning arrester has failed, replace the failed arrester in time to prevent lightning damage to the inverter or other equipment of the user.

Anger DANGER

Make sure that the inverter is disconnected from all power sources and that the capacitors are fully discharged before carrying out any checks or operations to avoid the risk of electric shock.

The Company shall not be liable for damage caused by :

- 1. Damage caused by improper use or use in a wrong location.
- 2. PV modules with an open-circuit voltage exceeding the maximum permissible voltage.
- 3. Damage caused by the operating temperature exceeding the restricted operating temperature range.
- 4. Dismantling and repair of the inverter by unauthorised persons.
- 5. Damage caused by force majeure: damage during transport or handling of the inverter.



9. Datasheet

MODEL	HESP4880SH3	HESP48100SH3	HESP48120SH3	Settable
Inverter output				
Rated Output Power	8000W	10000W	12000W	
Max. Peak Power	16000VA	20000VA	24000VA	
Rated Output Voltage	2	30/400Vac (three-phas	e)	Y
Output Voltage Error		±5%		
Load Motor Capacity	5HP	6HP	6HP	
Rated Frequency		50/60Hz ± 0.3Hz		Y
Waveform		Pure Sine Wave		
Switch Time		10ms (typical)		
Overload	output after 3 minutes, 5 consecutive overloads will shut down the output until the inverter is restarted. (102% <load<110%): 5="" after="" alarm,="" down="" minutes.<br="" output="" shut="">(110%<load<125%): 20s.<br="" after="" alarm,="" down="" output="" shut="">(125%<load<200%): 10s.<br="" after="" alarm,="" down="" output="" shut="">Single phase overload logic: 1.5*(102%<load<110%): 5<br="" after="" alarm,="" down="" output="" shut="">minutes.</load<110%):></load<200%):></load<125%):></load<110%):>			
AC output (on-grid)		m, output shut down a		
Rated Output Power	8000W	10000W	12000W	
Max. Peak Power	8000VA	10000VA	12000VA	
Power Factor		0.8 leading to 0.8 laggi	ng	
Rated Voltage		3L/N/PE 230/400Vac		
Rated AC Frequency		50/60Hz		
Rated AC output phase current	11.6Aac	14.5Aac	17.4Aac	
THD	<3%			
Battery				
Battery Type	Li-ion / Lead-Acid / User Defined			Y
Rated Battery Voltage	48Vdc (minimum start-up voltage 44V)			
Battery Voltage Range	40-60Vdc			
Max. Generator Charging Current	100Adc	120Adc	120Adc	Y



Max. Grid Charging Current	100Adc	120Adc	120Adc	Y
Max. Hybrid Charging Current	180Adc	220Adc	260Adc	Y
PV input				1
No. of MPPT Trackers		2		
Max. PV Input Power	6000W/6000W	7500W/7500W	9000W/9000W	
Max. PV Input Current		22/22Adc	1	
Max. PV Isc		37A/37Adc		
Max. Open Circuit Voltage		800Vdc/800Vdc		
MPPT Operating Voltage Range	2	200-650Vdc/200-650Vd	с	
Grid / Generator input				1
Input Voltage Range	phase voltag	e 170~280V, line voltag	ge 305~485V	
Input Frequency Range		50/60Hz		
Max. AC bypass current	23.2Aac	29Aac	35Aac	
Efficiency		1	1	1
MPPT Tracking Efficiency		99.9%		
Max. Battery Inverter		≥92%		
Efficiency		2 92 70		
European Efficiency	97.2%	97.5%	97.5%	
Protection				1
PV Input Lightning		Yes		
Protection				
Anti-islanding Protection	Yes			
PV String Input Reverse Polarity Protection	Yes			
Insulation Resistor Detection	Yes			
Residual Current Monitoring Unit	Yes			
Output Over Current Protection	Yes			
Output Shorted Protection	Yes			
Surge Protection	DC type II/AC type II			
Over Voltage Category	DC type II/AC type III			
Certified specifications				I
On-grid standard	EN50549,VDE4105			
Safety	IEC62109-1, IEC62109-2			



EMC	EN61000-6-1, EN61000-6-3, FCC 15 class B		
RoHS	Yes		
Basic data			
Parallel capacity	6		
Operating Temperature Range	-25~60°C,>45°C derated		
Humidity range	0-100%		
Noise	<60dB		
Protection Degree	IP65		
Cooling Method	Heat sink + intelligent fan cooling		
Self-consumption	<130W		
Dimensions	700*440*260mm		
Weight	39.2kg		
Communication port	RS485 / CAN / USB / Dry contact	Y	
External Modules (Optional)	Wi-Fi / GPRS	Y	